


TV Cable Corrector Kit

Part No.
AS1-01K

- Springs (5)
- Stops (5)

GM TH200, 200-4R, TH200C, 4L60; Ford AOD, AXOD

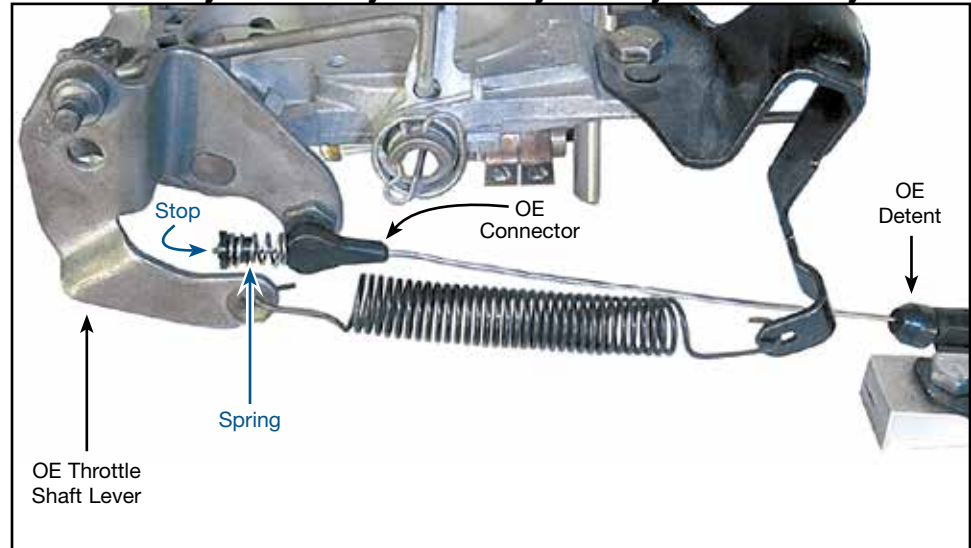

1. Disconnect OE TV cable attachment element from throttle shaft lever.
2. Slide OE TV cable attachment element down TV cable slightly.
3. Slide Sonnax spring over end of OE TV cable until it butts with the OE TV cable attachment element.
4. Slide OE TV cable above Sonnax spring into slot of retainer, flanged end away from spring.
5. Slide Sonnax spring over retainer until it snaps into place and butts with the OE retainer flange.
6. Reconnect OE TV attachment element onto OE throttle shaft lever.

NOTE: When the throttle shaft lever is stroked by hand, the spring collapses fully. This is not a problem because the amount of pull is less when the engine is running. Thus the spring will not fully compress unless the throttle is stroked to full throttle position.