

Boost Valve Kit


Part No.

39741-44K

- Valve
- Sleeve

NOTE: OE ratio. Also fits Volvo (AM6), Opel (AF40), Peugeot (TF80), Saab (AF40/6), LandRover (TF80), Ford (AF21) and Mazda (AW6A-EL).

Aisin AW TF-80SC, TF-81SC

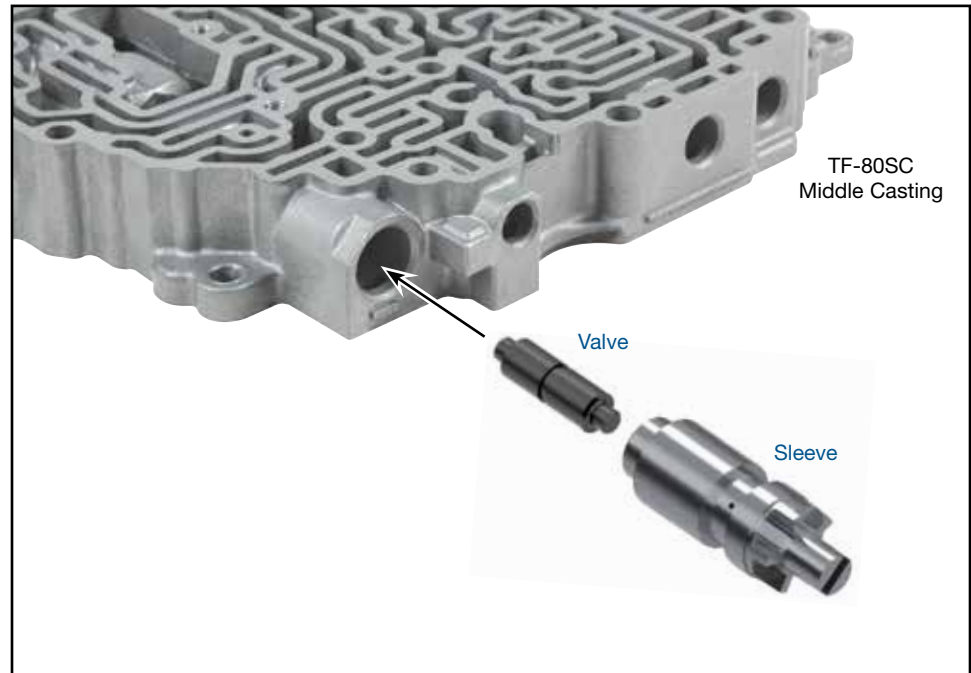

NOTE: Observe and record the step location of retainer on OE sleeve end prior to removal.

1. Disassembly

Remove and discard OE boost valve and sleeve.

2. Installation & Assembly

- Install Sonnax boost valve and sleeve.
- Ensure retainer is set at the same step location on the Sonnax sleeve as it was for the OE sleeve.

3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg or more.

