


TCC Apply Boost Valve Kit

Part No.

126740-03K

- Valve
- Sleeve

Ford 6R140

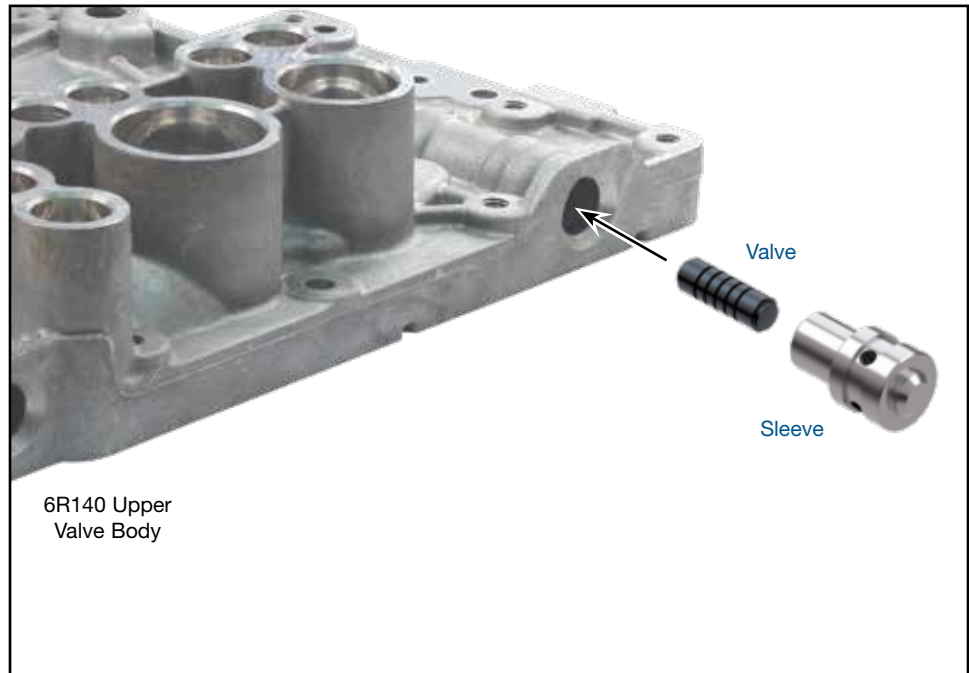

1. Disassembly

- Remove OE retaining clip and save for reuse.
- Remove and discard OE TCC apply boost sleeve and valve.

2. Installation & Assembly

- Be certain all debris has been removed from valve bore and valve body.
- Insert Sonnax valve and sleeve into bore with sleeve opening facing inward.
- Reinstall OE retaining clip.

3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg.

