

HIGH PERFORMANCE DRIVELINE PARTS

Instructions

3-Bolt Adapter Flange Yoke Kit

Part No. T35-GMFD-01K

• 3-Bolt Adapter Flange Yoke

• Spacer 8L90 & 10L80 Only

NOTE: Yoke fits 6L80, 6L90, 8L90, 10L80 units, TR6060, TR3160 manual units. Also fits '05–'06 Pontiac GTO (differential side).








NOTE: For GM 8L90 and 10L80 transmissions only: included Sonnax spacer must be installed in Sonnax yoke.

Spacer Installation

- 1. Apply green Loctite® or similar sleeve retaining compound to outside of spacer.
- 2. Install spacer into pilot bore of Sonnax yoke (Figures 1, 2 & 3).

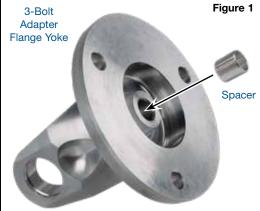

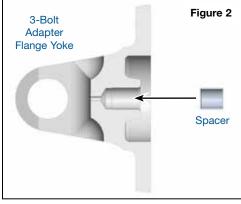

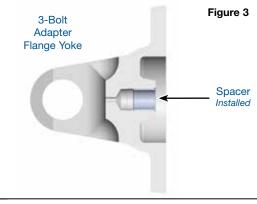

©2021 Sonnax Transmission Company, Inc. • A Marmon/Berkshire Hathaway Company

T35-GMFD-01K-IN 04-27-21