


## Primary Pulley Boost Valve Kit

Part No.

**33740-01K**

- Valve
- Sleeve

## Ford CFT30

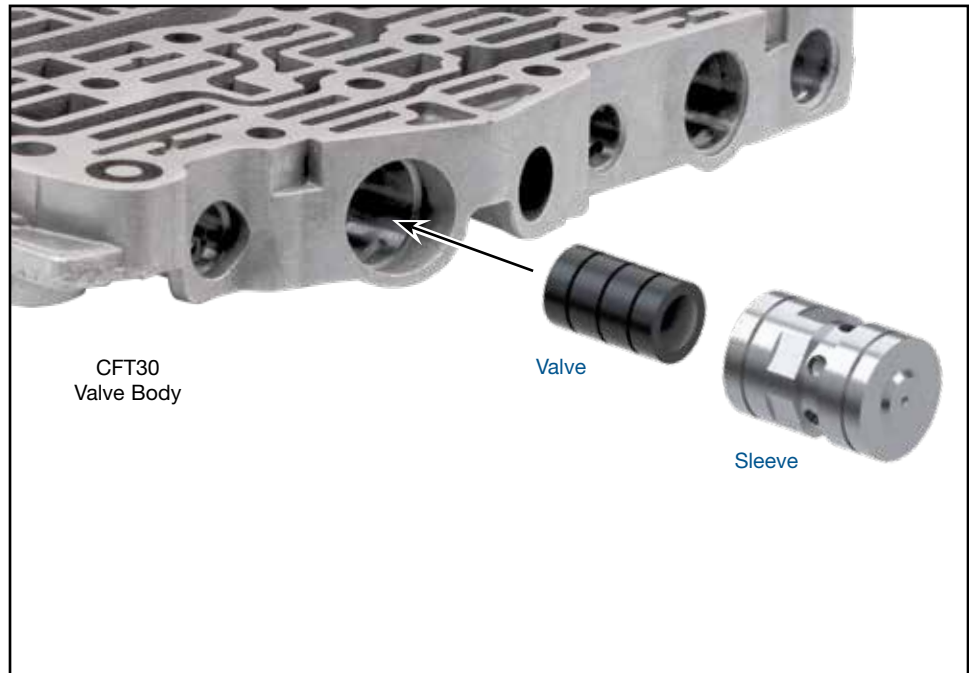

### 1. Disassembly

- Remove OE retainer and end cap, set aside for reuse.
- Remove and discard OE boost valve and sleeve.

### 2. Installation & Assembly

- Install Sonnax boost valve and sleeve.
- Reinstall OE end plug and retainer.

### 3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 16 in-Hg.

