


## Boost Valve Kit

### Part No.

**56947J-74K**

- Sleeve
- Inner Boost Valve
- Outer Boost Valve

## Ford 5R55S, 5R55W

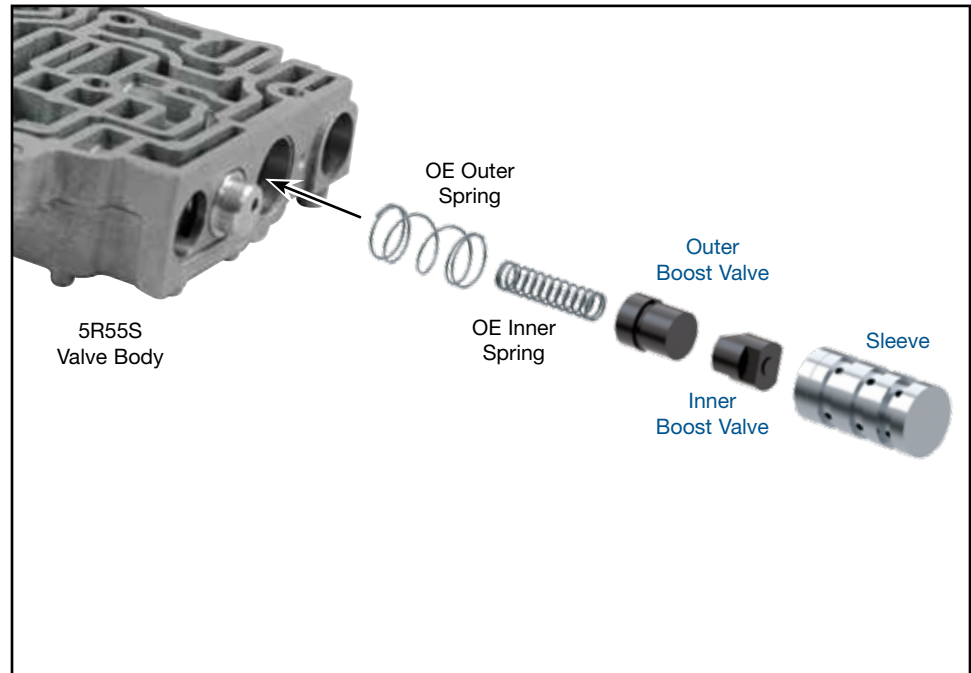

### 1. Disassembly

- Remove OE retaining clip, set aside for reuse.
- Remove and discard OE boost valve/sleeve assembly.

### 2. Installation & Assembly

- Install Sonnax boost valve/sleeve assembly. Ensure OE inner spring is seated in outer boost valve spring pocket (**main illustration**).
- Reinstall OE retaining clip.

### 3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg.

