


Instructions

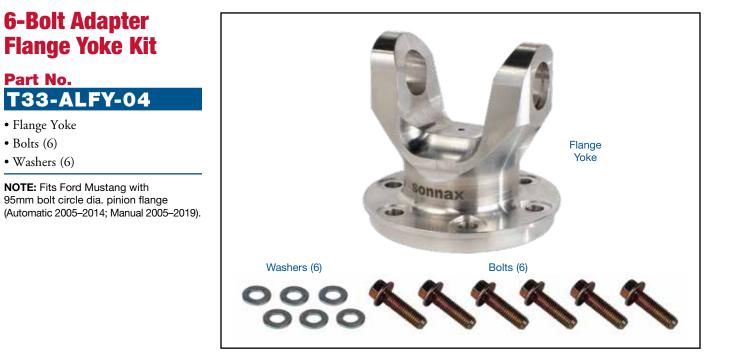

Instructions

NOTE: After removal of driveshaft, ensure mating surface and bolt holes are free of any contamination, including removing old Loctite[®] from all surfaces.

- 1. Install new driveshaft with Sonnax flange yoke attached, ensuring yoke is fully seated in the pinion flange cup before starting bolts.
- 2. Apply blue Loctite[®] to bolt threads, then install Sonnax bolts and washers in a star pattern. Torque to 41 ft-lbs (55Nm).

800-843-2600 • 802-463-9722 • F: 802-463-4059 • www.sonnax.com