

Lockup

Part No.


ValveSleeve

Boost Valve Kit

122740-30K

Aisin Seiki AS66RC, AS69RC

Instructions

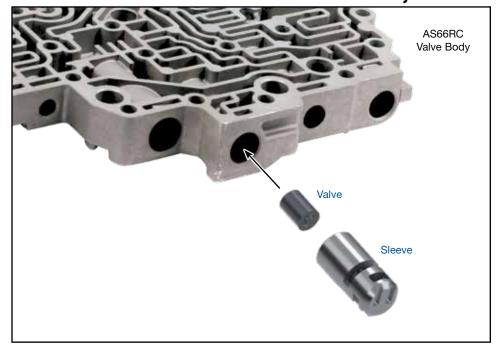

1. Disassembly

- a. Remove OE retainer and save for reuse.
- b. Remove and discard OE boost valve and sleeve assembly.
- c. Remove OE spring and valve. Save for reuse.

2. Installation & Assembly

- a. Be certain all debris has been removed from the valve bore and valve body.
- b. Install OE valve and spring.
- c. Install Sonnax boost valve and boost sleeve assembly.
- d. Reinstall OE retaining clip.

3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg.

