


C1 Apply Boost Valve Kit

Part No.

168740-01K

- Valve
- Sleeve

Toyota/Lexus UA80E, UA80F, UB80E, UB80F

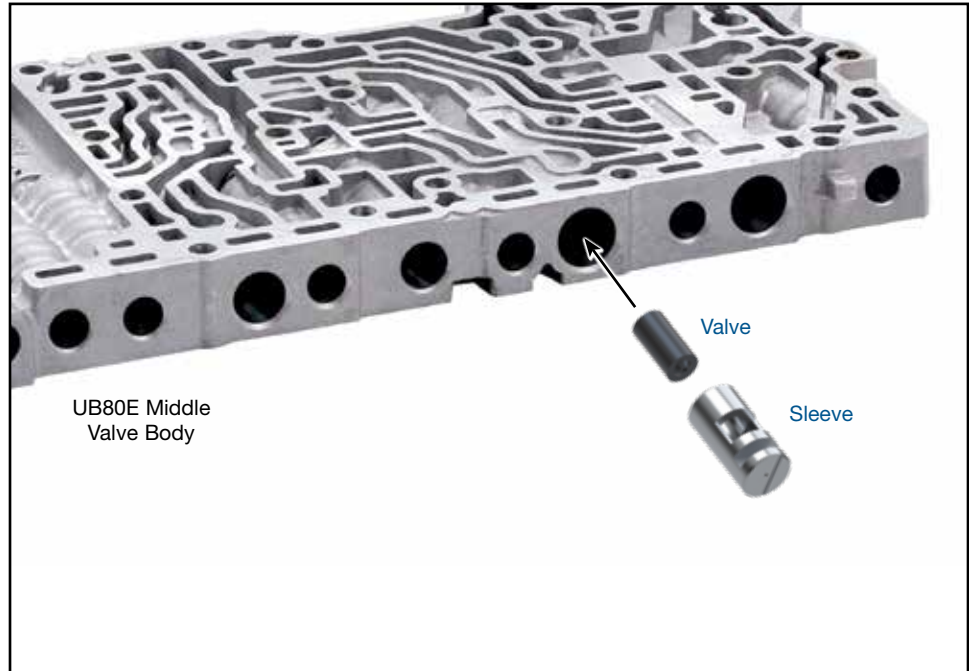

1. Disassembly

- Remove OE C1 apply boost valve assembly and retainer.
- Discard boost valve assembly and save retainer for reuse.

2. Installation & Assembly

- Install Sonnax C1 apply boost valve assembly.
- Reinstall OE retainer to secure the assembly in the bore.

3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg.

