


## C4 Apply Boost Valve Kit

Part No.

**168740-02K**

- Valve
- Sleeve

### Toyota/Lexus UA80E, UA80F, UB80E, UB80F

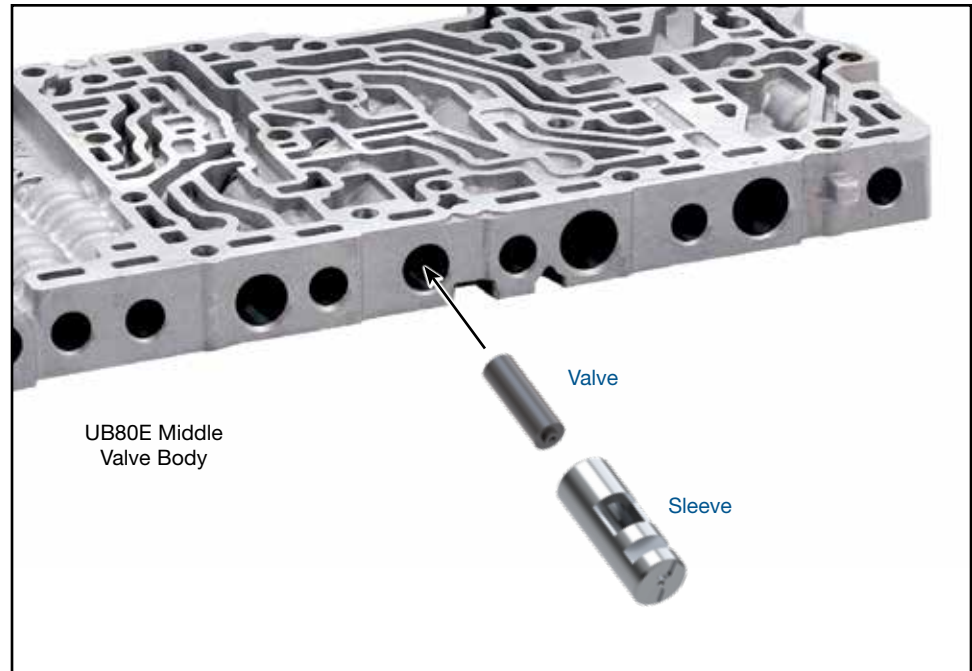

#### 1. Disassembly

- Remove OE C4 apply boost valve assembly and retainer.
- Discard boost valve assembly and save retainer for reuse.

#### 2. Installation & Assembly

- Install Sonnax C4 apply boost valve assembly.
- Reinstall OE retainer to secure the C4 apply boost valve assembly in the bore.

#### 3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg.

