

3-Bolt Adapter Flange Yoke Kit

Part No.

T35-BMWF-01K

- 3-Bolt Adapter Flange Yoke
- Spacer .552" Pilot Dia.

NOTE: This yoke is a custom part and may fit more models than noted above. Measure pinion and output flange bolt holes and bolt circle diameter to determine if this yoke is appropriate for your build.



NOTE: For pilot diameter of .631", Sonnax spacer is not necessary and can be discarded. For pilot diameter of .552", install spacer as indicated.

Spacer Installation

1. Apply green Loctite[®] or similar sleeve retaining compound to outside of spacer.
2. Install spacer into pilot bore of Sonnax yoke (**Figures 1, 2 & 3**).

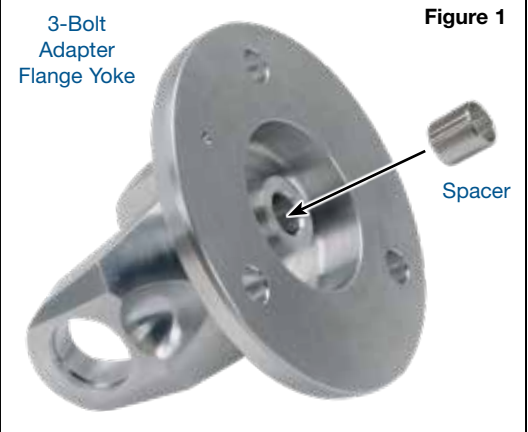


Figure 1

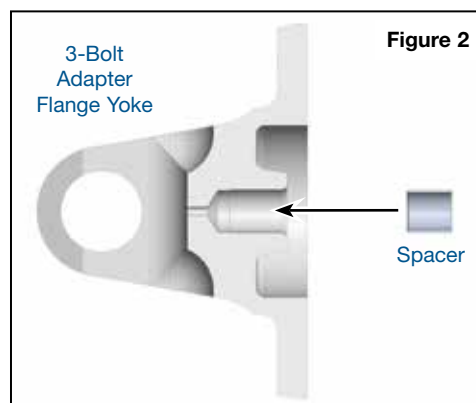


Figure 2

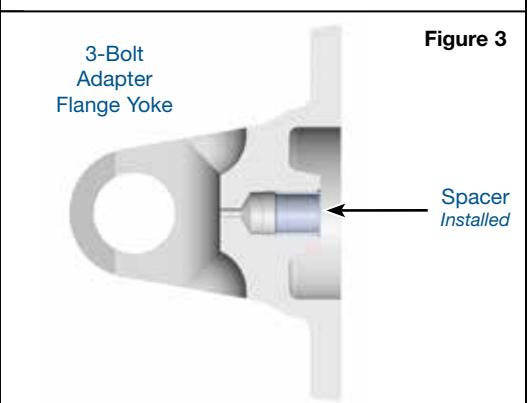


Figure 3