

## Chrysler Filter to Hipster Valve Body Extension Kit

**Part No.**  
**28801-S11K**


- Filter Extension Casting
- Filter Gaskets
- Extension Screws (3)
- Pan Screws (3)
- Lock Washers (3)

#### Also Available

**Oil Pan**  
**28801-S** Powerglide

**Oil Pan Stud Kit**  
**28711-01K** Powerglide

**Oil Filter Extension Kit**  
**28801-S09K** Powerglide filter to  
Powerglide valve body

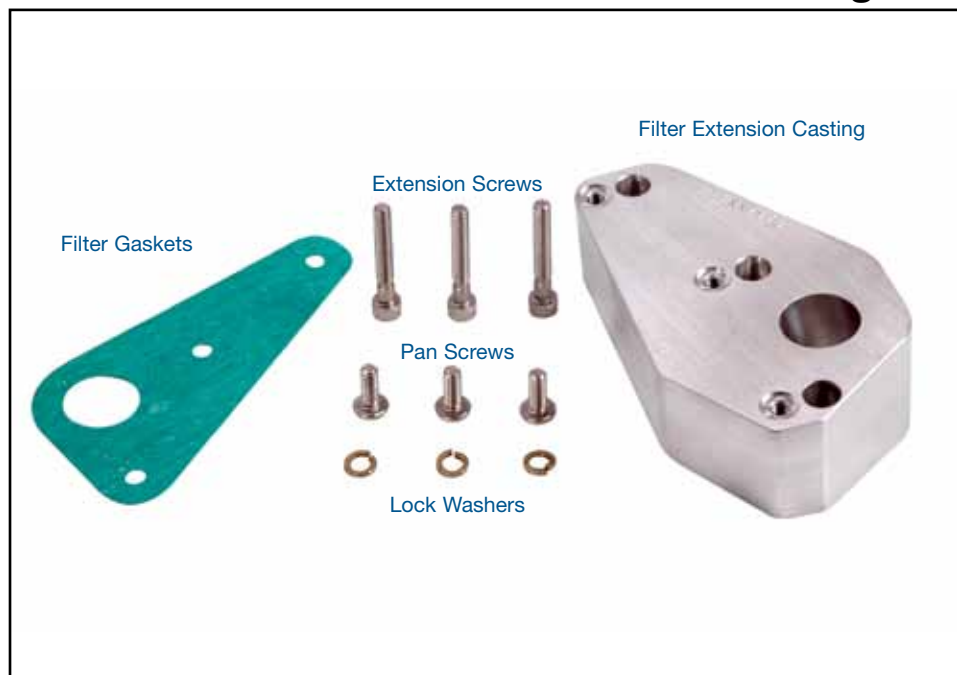

1. Remove and discard the existing filter, filter gasket and filter mounting hardware.
2. Thoroughly clean the filter mounting surface on the valve body by removing any dirt, sludge or remaining gasket material.
3. Mount the oil filter extension (**Item 1**). Place the gasket (**Item 2**) between the extension and the filter mounting surface of the valve body. Fasten the extension using the 10-24 x 1-1/4" socket head cap screws (**Item 3**) and lock washers (**Item 4**).
4. Mount a Chrysler oil filter (**Item 6**) to the extension using the 10-24 x 1/2" button head cap screws (**Item 5**).

**NOTE:** The new filter is not included in the kit.

