

Center Support Gasket

Part No.
36743G


NOTE: Standard quantity 5/bag

Also Available

**Center Support Hub
& Bearing Kit**
36743H-01

'95-Later

Ford 4R100, E40D

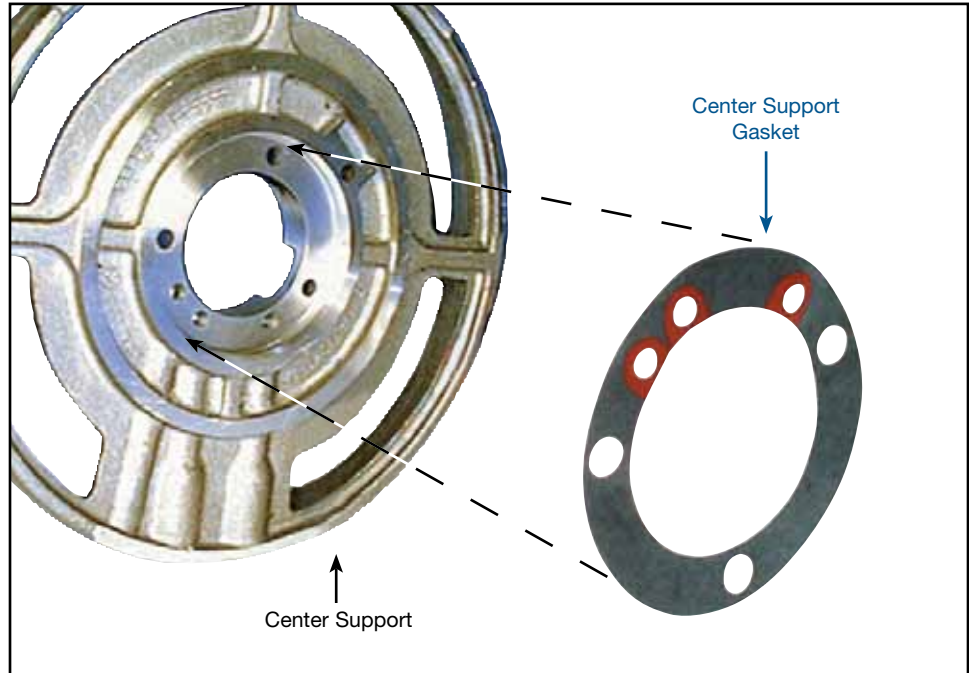

Instructions

1. Remove any burrs and break sharp edges on the aluminum center support contact surface.
2. Using a medium grit oil stone, smooth the mating hub surface.
3. Clean both parts, including the tapped holes, with solvent.
4. Lightly coat gasket surface with TransJel™ and place it in the center support counter-bore with beaded gasket surface against center support.
5. Align gasket holes with center support and set hub in place.
6. Apply Loctite® 242 thread locker on the (3) M6 mounting screws, following the Loctite® instructions.
7. Install screws and progressively torque to 75-85 in-lbs initially, then torque to 100-120 in-lbs.