TRANSMISSION PARTS


Instructions

Ford C6

1-2 Accumulator Valve Spring Kit

Part No. 36946-05K

- Outer Springs (5)
- Inner Springs (5)

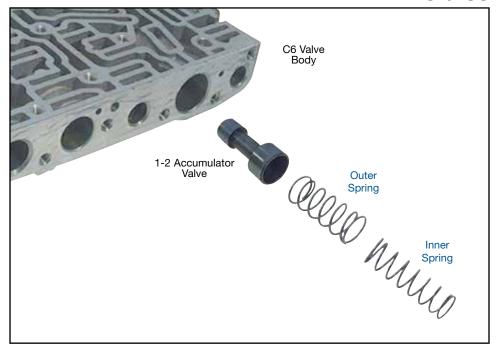

1. Disassembly

- a. Inspect 1-2 accumulator springs. If either are broken or measure less than $1^5/_{16}$ " long, then the spring set needs to be replaced. Stretching out existing springs isn't an option since they will quickly collapse again in service.
- b. Discard the damaged springs

2. Installation & Assembly

Replace damaged springs with Sonnax 1-2 accumulator spring set.