


Wiring Harness Connector Bracket

Part No.
77980-01K

GM 4L60-E, 4L65-E, 4L70-E

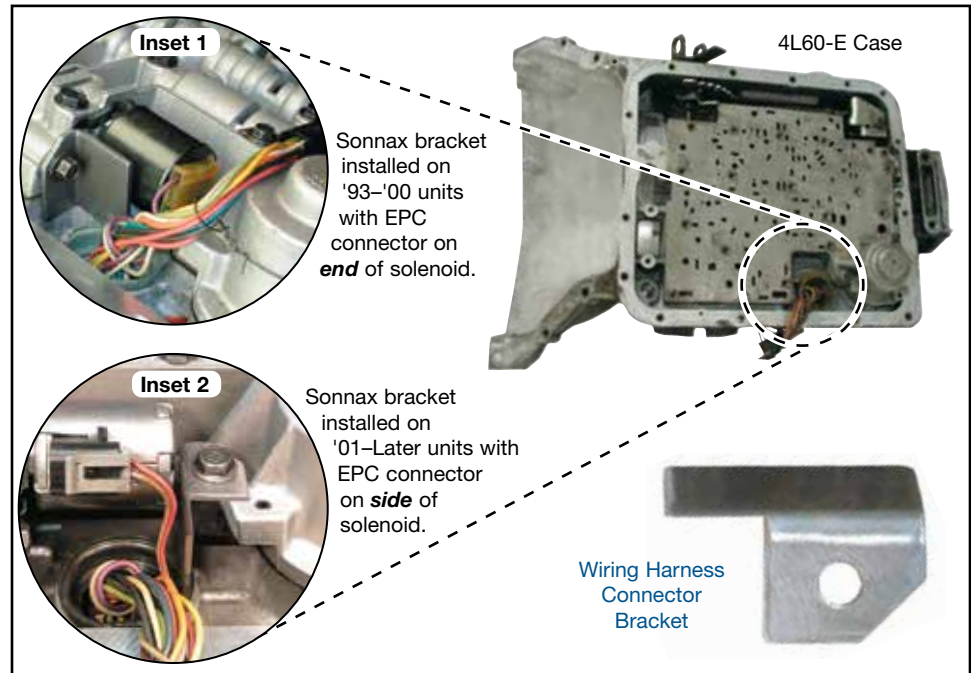

1. Disassembly

Remove OE bolt from case and keep for reuse.

2. Installation

a. Install Sonnax bracket in the position noted below for the year of application:

- **1993-2000** Install bracket on EPC connector positioned on end of solenoid (**Inset 1**).
- **2001-Later** Install bracket on EPC connector positioned on side of solenoid (**Inset 2**).

b. Secure with OE bolt.