

Valve Saver Cap

96201-15K

5 Valve Saver Caps
5 Retainer Clips


US Patent No. 6,722,385

Also Available

96201-10

Retainer Clip

Note: These retainers are applicable to numerous Ford valve body locations.

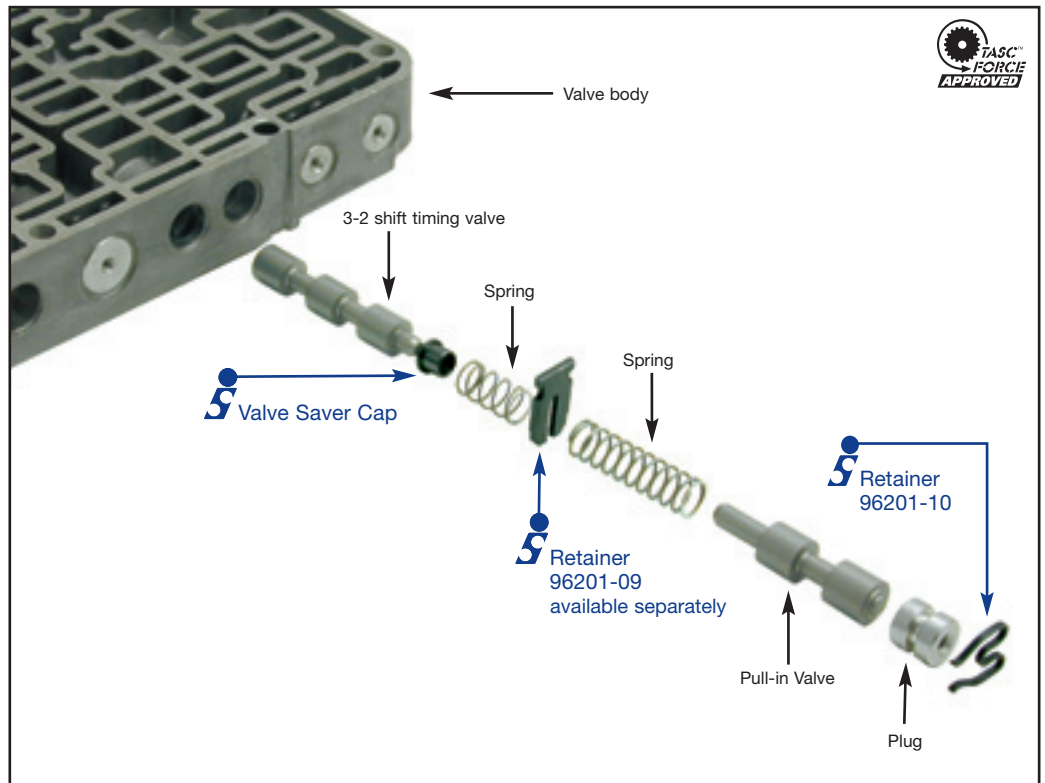

Installation Instructions

1. Remove the pull-in assembly and clip to get to the 3-2 control valve.
2. Remove the 3-2 timing valve to verify it is not bent and ensure stroke action is complete.
3. Verify that the Sonnax valve saver cap **96201-15K** will be able to move freely over the end of the valve.

Note: Assemble with Trans-Gel™ to keep the cap from coming off the valve during installation.

Reassembly Overview

1. OEM 3-2 shift valve, Sonnax Valve Saver Cap
2. OEM Spring, Sonnax Retainer Clip
3. OEM Spring
4. OEM Pull-in Valve
5. OEM End Plug
6. Sonnax Retainer Clip