

Instructions

Input/Counter Drive Bearing

Part No. 323232-A

NOTE: Also fits Mitsubishi F1CJB.

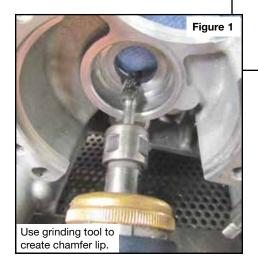

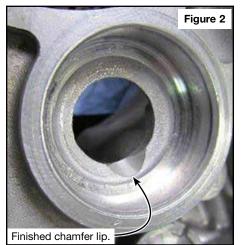

Jatco/Nissan JF015E (RE0F11A)



NOTE: Early OE bearing was sealed. As the updated Sonnax bearing uses an open design, a slight case modification is necessary to guarantee adequate bearing lubrication.

- 1. Chamfer lip of case behind bearing cup with a grinding tool (**Figures 1 & 2**). Ensure chamfer is lined up with bore below (**Figure 3**).
- 2. Thoroughly clean all chips.
- 3. Install Sonnax inner bearing race oriented as shown, then install bearing (Figure 4).
- 4. Suggested bearing endplay is .005–.020." If OE bearing used shim(s), they can be reused or discarded as needed to maintain tolerance.

