ZF6HP19/26/32 (Generation 1), Ford 6R60, 6R75, 6R80, ZF6HP21/28/34 (Generation 2)

IDENTIFICATION GUIDE

Valve Body Identification

Valve components differ between **Generation 1** (ZF6HP19/26/32), **Ford 6R60, 6R75, 6R80** and **Generation 2** (ZF6HP21/28/34) valve bodies. Please use this identification guide to determine which generation you have to ensure correct valve kits and components are selected for your rebuild.

Generation 1 (ZF6HP19, 26 & 32), Ford 6R60, 6R75, 6R80

Generation 2 (ZF6HP21, 28 & 34)

1. IDENTIFY!

1st Generation Case Side
Includes 19, 26 & 32

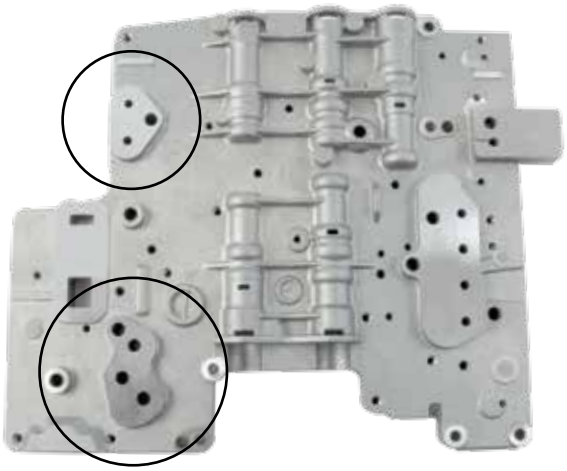

2nd Generation Case Side
Includes 21, 28 & 34

2. VERIFY!

Different Sized Pressure Regulator Valves and Sleeves

Pressure Regulator Valves and Sleeves Cannot Be Interchanged

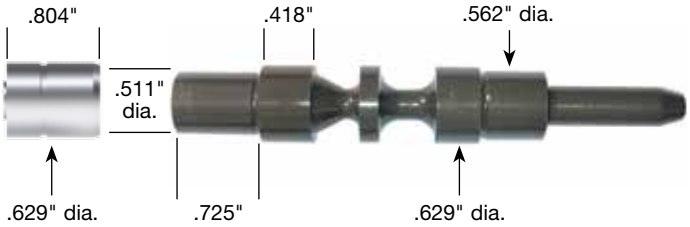

Generation 1 (ZF6HP19, 26 & 32), with 053 Separator Plate

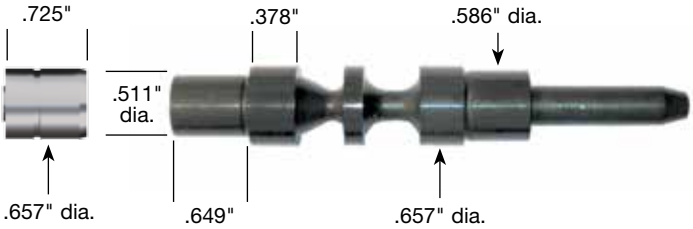

NOTE: Some BMW 6 & 7 series with six accumulators have a different sized pressure regulator valve. This is most commonly seen on the A053/B053 separator plate applications.

CAUTION: Some valve sizes and locations differ from non-053 plate Generation 1 units. Reference 053 plate vacumm test guide and exploded view for details.

Verify OE dimensions indicated in order to select correct Sonnax parts.

©2016 Sonnax Industries, Inc.

800-843-2600 • 802-463-9722 • F: 802-463-4059 • www.sonnax.com

ZF6HP21, ZF6HP28, ZF6HP34 (Generation 2) ZIP KIT

PART NUMBER ZF6-GEN2-ZIP **QUICK GUIDE**

Valve Body Identification

This Zip Kit **ZF6-GEN2-ZIP** is designed for ZF6HP21, ZF6HP28, ZF6HP34 (Generation 2) applications only. A separate Zip Kit **ZF6-6R60-ZIP** is available for ZF6HP19, ZF6HP26, ZF6HP32 (Generation 1) and Ford 6R60, 6R75, 6R80 applications. See separate identification guide for details.

Parts are labeled here in order of installation. See other side of sheet for details on Zip Kit contents.

INSTALLATION DIAGRAM

CAUTION: Verify valve body is a Generation 2 model. See separate identification guide for details.

Upper Valve Body

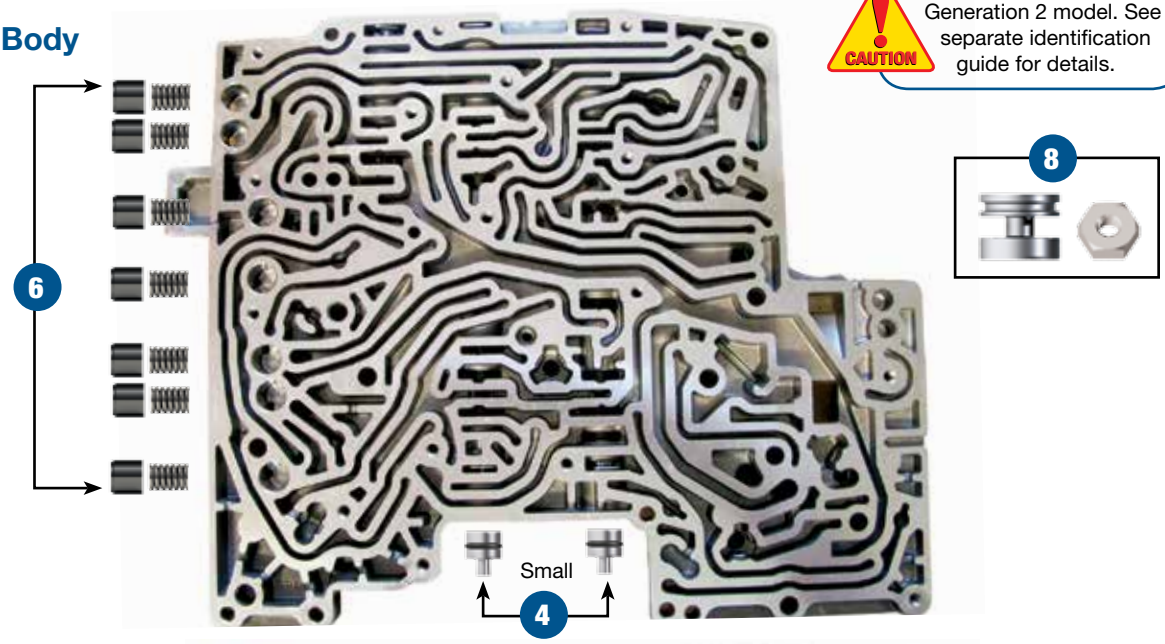

Lower Valve Body

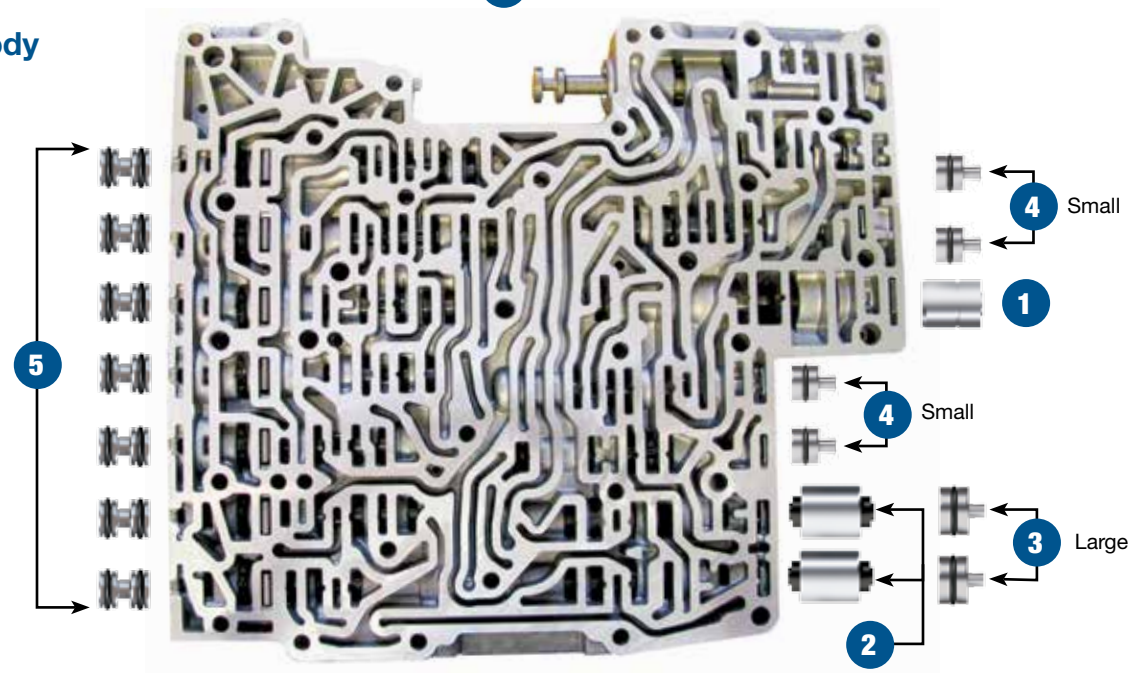

7 Solenoid O-Rings
Not Shown Here
See Page 3 of Booklet

In addition to general rebuilding tips and technical information, the technical booklet included in this kit contains vacuum testing and additional repair options for higher mileage units or for repairing specific complaints which are beyond the scope of this kit.

©2016 Sonnax Industries, Inc.

800-843-2600 • 802-463-9722 • F: 802-463-4059 • www.sonnax.com

Zip Kit Contents & Installation Steps

Step 1 Replace OE Sleeve

Packaging Pocket 1

CAUTION: Verify pressure regulator valve measurements! See separate Identification Guide for details.

Step 2 Replace OE Sleeve & Valve

Packaging Pocket 2

- Valves (2)
- Sleeves (2)

Step 3 Replace Large OE End Plugs

Packaging Pocket 3

- End Plugs, Large (2)
- O-Rings, Large (4) — 2 extra

Step 4 Replace Small OE End Plugs

Packaging Pocket 4

- End Plugs, Small (6)
- O-Rings, Small (9) — 3 extra

Step 5 Replace Internal OE End Plugs

Packaging Pocket 5

- End Plugs (7)
- O-Rings (20) — 6 extra

Step 6 Replace OE Pistons

Packaging Pocket 6

- Accumulator Pistons (7)
- Matching Springs (7)

Step 7 Replace OE Solenoid O-Rings

Packaging Pocket 7

- O-Rings, Size 10.5 x 2mm thick, Smaller (8)
- O-Rings, Size 13 x 2mm thick, Larger (7)

Packaging Pocket 8

- O-Rings, Size 13.5 X 2mm thick (4)

Packaging Pocket 9

- O-Rings, Size 14.5 x 1.5mm thick (5)

Packaging Pocket 10

- O-Rings, Size 14.5 x 2mm thick (3)

Packaging Pocket 11

- O-Ring, OR-014, Smaller (2)
- O-Ring, OR-016, Larger (2)

NOTE: See page 3 in the technical booklet included with this Zip Kit for details on replacement solenoid O-ring locations.

Step 8 Vacuum Testing

Packaging Pocket 12

- Testing Nut
- Testing End Plug

NOTE: See page 4 in the technical booklet included with this Zip Kit for instructions on how to vacuum test with these two parts.

©2016 Sonnax Industries, Inc.

ZF6HP21, ZF6HP28, ZF6HP34 (Generation 2) ZIP KIT

PART NUMBER ZF6-GEN2-ZIP **TECHNICAL BOOKLET**

Valve Body Identification

This Zip Kit **ZF6-GEN2-ZIP** is designed for ZF6HP21, ZF6HP28, ZF6HP34 (Generation 2) applications only. A separate Zip Kit **ZF6-6R60-ZIP** is available for ZF6HP19, ZF6HP26, ZF6HP32 (Generation 1) and Ford 6R60, 6R75, 6R80 applications. See separate identification guide for details.

Torque Specifications

Mechatronic-to-Case or Valve Body Halves Bolts 8Nm/71 in-lb	**Metal Oil Pan to Case** 14Nm/10 ft-lb
Plastic Oil Pan to Case 10Nm/89 in-lb	**Pump Bolts to Case** 10Nm/89 in-lb
Output Shaft Flange Nut 60Nm/44 ft-lb	

Clearance & Endplay

Rear Unit Endplay (flanged output) 0.15-0.35mm/.006-.013"	**Input Shaft Endplay** 0.2-0.4mm/.008-.015"

Clutch clearance and material is critical (refer to OE clutch travel specifications). These have fluid balanced clutch pistons.

Fluid

Ford 6R60 extension housing has an allen head fill plug and/or the front corner of the case has a hex head fill plug. A dipstick lives within this plug.
Note: *The thermal element must open (88ºC, 190ºF) to purge the cooler before verifying the fluid level!*

Complete Fill Required 9.5 qt./9 ltr.	**Service Fill Approx.** 4.2 qt./4 ltr.
Ford Fluid XT-6-QSP, Mercon SP	**ZF Fluid** S671 090 0255-Shell M-1375.4

Drive-Cycle Relearn

Ford requires six light throttle up and coastdown shift cycles (after obtaining 80ºC/175ºF) for a partial relearn.

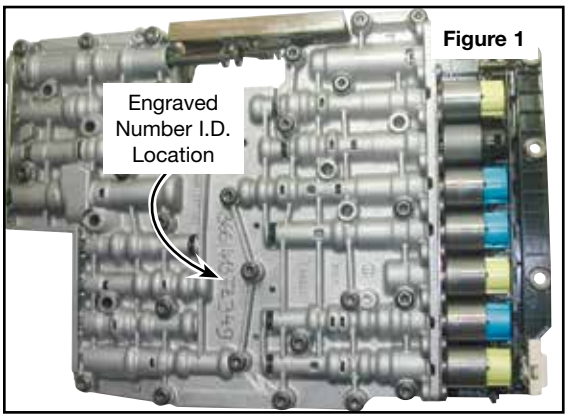

Figure 1

OE Serviced Valve Body

Cautions

Electronics

Do not use an ohm meter with more than .6 voltage supply. The TCM is capable of limited solenoid adaptation without reprogramming. After any service, resetting adapts/clearing KAM is suggested. In many instances, solenoids can be replaced with new OE or with qualified used. Original solenoids, if reused, should be returned to their same location due to a learned flow rate by the TCM. Make every effort to avoid mixing up the solenoids.

It is not advised to attempt circuit testing through the 16-pin connector. Check the solenoid resistance (5.0 ohms at 20ºC/68ºF) with the circuit board removed.

Visual Identification

The ZF6 has two generations:

- 2002–2005 ZF6HP19, ZF6HP26, ZF6HP32 = Generation 1
- 2006-later ZF6HP21, ZF6HP28, ZF6HP34 = Generation 2

The 19, 26 and 32 of Generation 1 ZF6 units refer to the sequentially larger amounts of torque capacity. In 2006, the mechatronic was upgraded to increase oil flow, which reduced the duration of the shift. These units became known as Generation 2, and were given the numbers 21, 28 and 34. The photos on the separate identification guide show how to identify and verify the valve body as a Generation 1 or Generation 2 version with the updated solenoids.

Within both vintages, there is an "M" version for the manual valve and an "E" solenoid controlled manual valve. The "E" version in both the early and late generations will have two additional solenoids, for a total of 9.

Technical Tips

Reprogramming

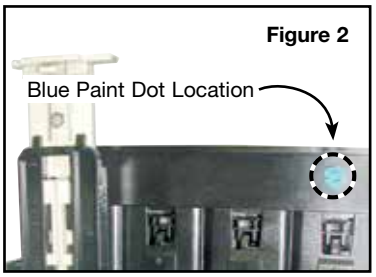

Figure 2

As indicated on the photo (**Figure 1**) an engraved number identifies this mechatronic as a service unit. This exchange unit may also have a blue paint dot, (**Figure 2**) on the solenoid end of the plastic frame, next to the bar code part number. This blue dot indicates it is NOT programmed and that the unit must be flashed with vehicle application prior to installation.

A white dot in the same area indicates the unit HAS been programmed without the transmission.

A pin dot identification in the same area with a fifth, sixth or seventh digit of 128 indicates this is a NEW unit, not a serviced mechatronic.

©12-13-16 Sonnax Industries, Inc.

800-843-2600 • 802-463-9722 • F: 802-463-4059 • www.sonnax.com

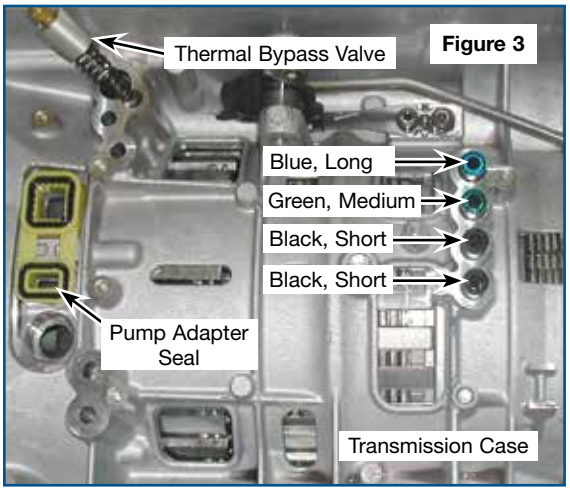

Figure 3

Technical Tips (continued)

Transmission Specifications & Reassembly Tips

ZF suggests the body-to-case, pump in/out adapter seal be replaced on every valve body R-R (**Figure 3**). The overall seal height on these vary depending on application. Make sure you have the correct size.

There are four mechatronic-to-case center support seals. The longest (blue) resides next to the manual linkage, medium (green) next to it. The two shortest ones (black) are furthest from the linkage (**Figure 3**).

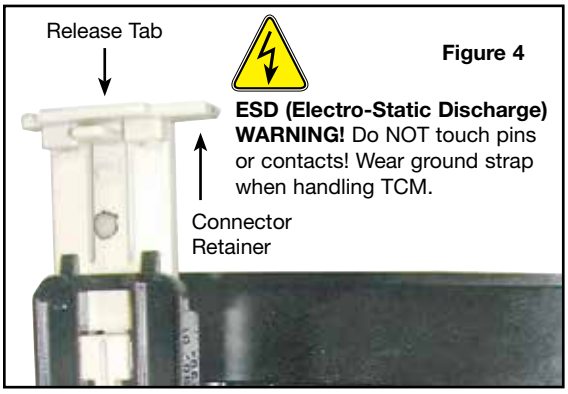

Figure 4

Zip Kit Instructions

1. Valve Body Removal from Case

a. Press release tab and lift connector retainer (**Figure 4**).

b. Pull connector sleeve out of case.

c. Remove 10 or 11 bolts to drop valve body from case (**Figure 5**).

2. Valve Body Disassembly

a. Remove seven bolts to remove TCM from valve body (**Figure 6**).

b. Remove TCM (**Figure 7**).

c. Pry valve body halves from separator plate where indicated (**Figure 8**).

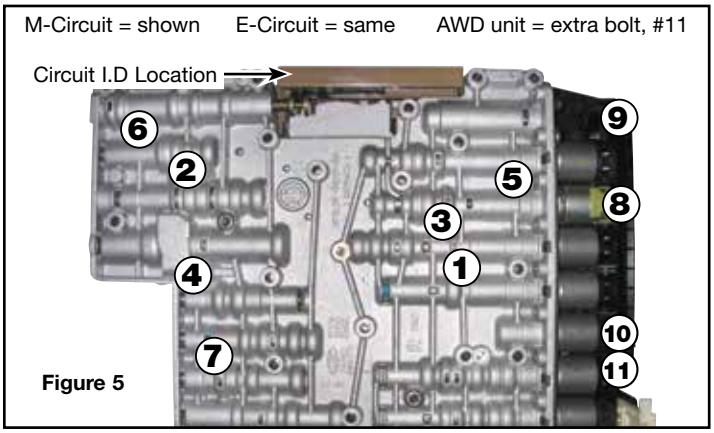

Figure 5

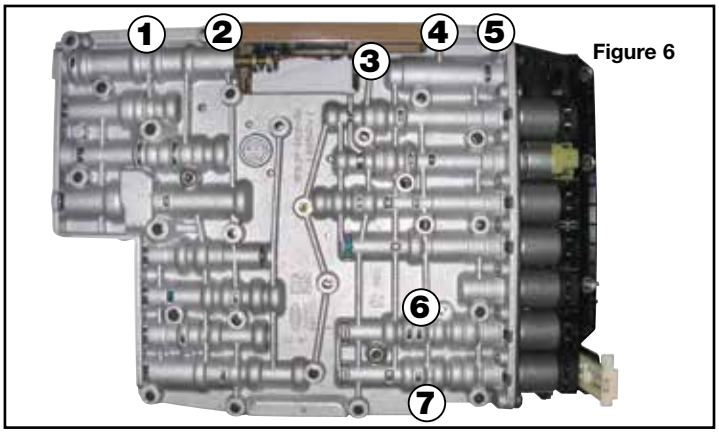

Figure 6

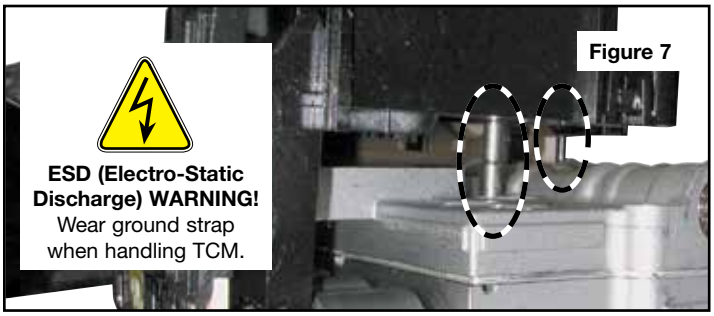

Figure 7

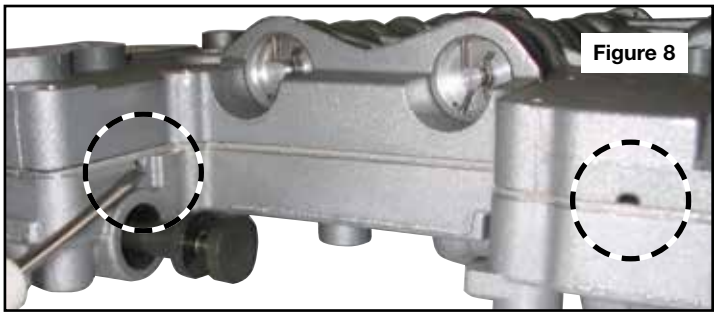
Figure 8

©2016 Sonnax Industries, Inc.

800-843-2600 • 802-463-9722 • F: 802-463-4059 • www.sonnax.com

2. Valve Body Disassembly (continued)

NOTES: The separator plate has a bonded gasket which may delaminate during disassembly (**Figure 9**). If any damage or delamination to the gasket is present, a new Sonnax separator plate should be used.

These separator plates are specifically calibrated, requiring either the OE valve body code or an identification number stamped on original plate (**Figures 10 & 11**) for reorder. See Sonnax application chart for cross-reference numbers (**Figure 12**).

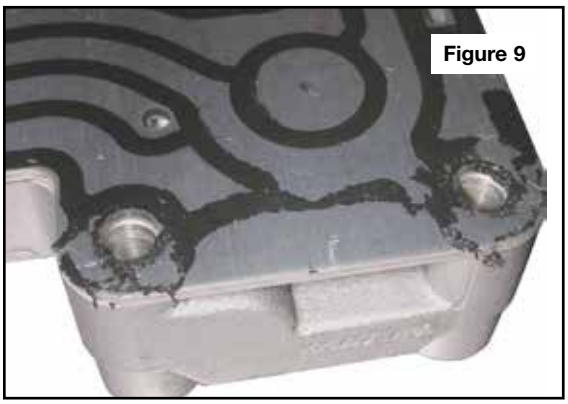

Figure 9

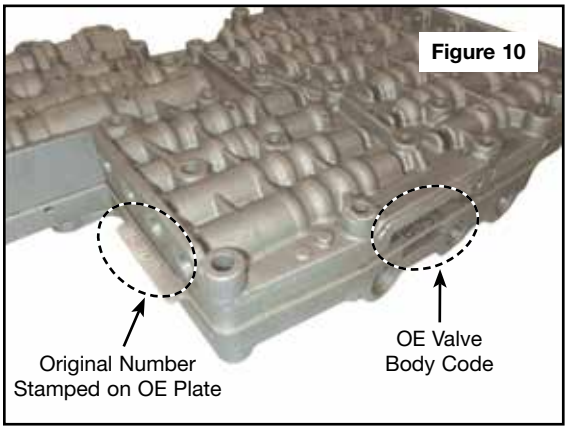

Figure 10

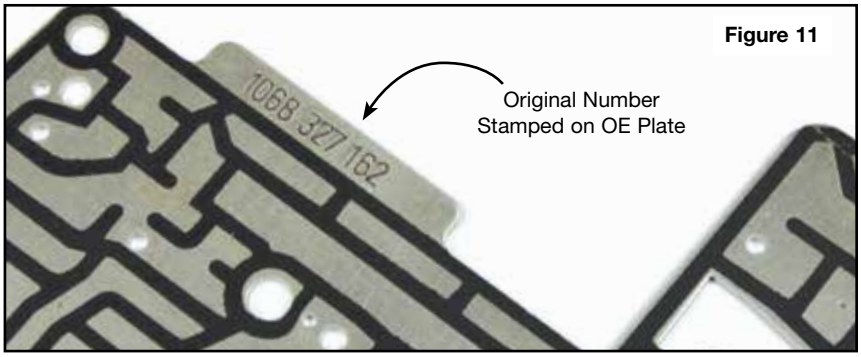

Figure 11

Valve Body Separator Plate Application Chart — Figure 12

OE Valve Body Code	Number Stamped on Original Plate	Order Sonnax Part Number	Valve Body Generation
E510F	6L2P-7Z490-FC or 6L2P-7Z490-FB	95740-510**	Ford 6R60
A035/B035	1068-327-141	95740-035	ZF6HP19/26/32 (Generation 1)
A036/B036	1068-327-145	95740-051*	
A046/B046	1068-327-162	95740-046	
A047/B047	1068-327-163	95740-047	
A051/B051	1068-327-179	95740-051*	
A052/B052	1068-327-180	95740-052	
A053/B053	1068-327-189	95740-053	
A063/B063	1068-327-210	95740-063	ZF6HP21/28/34 (Generation 2)
A065/B065	1068-327-224	95740-065	

*Sonnax valve body plate **95740-051** is a direct replacement for both OE valve body codes A036/B036 and A051/B051, due to supersession by ZF.
Sonnax valve body plate **95740-510 is a replacement for OE plates stamped with part number 6L2P-7Z490-FB or 6L2P-7Z490-FC.

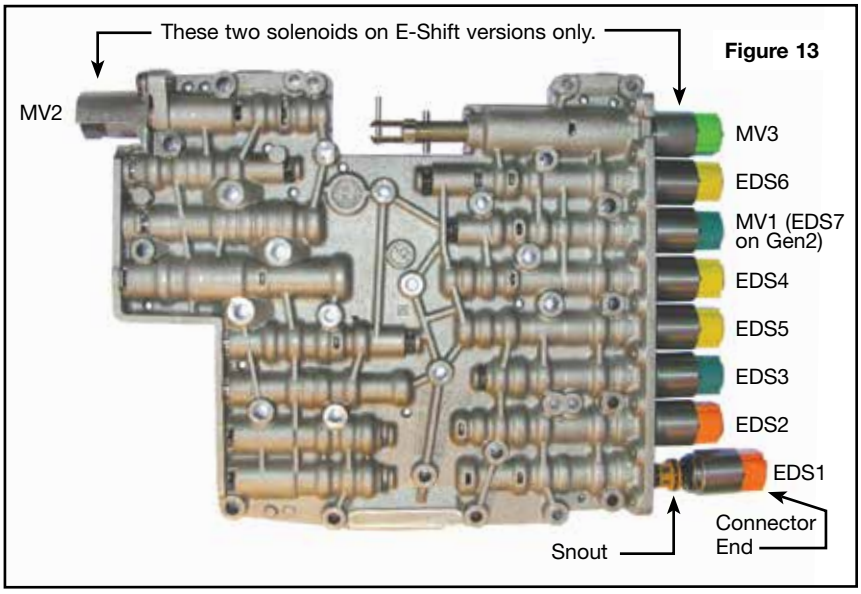

Figure 13

NOTE: O-ring sizes vary depending upon solenoid, location, make, model and generation version. Included in this Zip Kit are 31 standard replacement-size O-rings for the various solenoids. It is recommended to verify the size of the replacement O-ring by physically comparing it against the OE. The chart (**Figure 14**, page 8) provides some general guidance.

3. Installation

Install Zip Kit parts as shown on diagram of separate quick guide sheet included in this Zip Kit. The locations of the replacement solenoids O-rings are shown at left (**Figure 13**). For additional solenoid information see Solenoid O-Ring Sizes chart (**Figure 14**) and Solenoid Function chart (**Figure 15**) on page 8 of this booklet.

Sonnax recommends vacuum testing critical wear areas not covered by this kit to determine whether additional Sonnax parts are required (see pages 4–5).

©2016 Sonnax Industries, Inc.

Critical Wear Areas & Vacuum Test Locations

NOTE: OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear and Sonnax parts noted for replacement.

Lower Valve Body • ZF6HP21, Generation 2, M-Shift Shown Here

Clutch B Control Pressure Regulator Valve
- Burned B Clutch
- 3rd or 5th Shift complaints

Clutch C Control Pressure Regulator Valve
- Burned B Clutch
- 2nd or 6th Shift complaints

Clutch A Control Pressure Regulator Valve
- Delayed/Harsh forward engagement
- Flare/Neutral on 5-4 downshift
- No 4-5 shift
- VFS 1/A solenoid control code

Replace with Sonnax Part No.
95740-28K* Boost Valve Kit
95740-66K Oversized Valve Kit, M-Shift Only
95740-72K Oversized Valve Kit, E-Shift Only
95740-66K: Requires F-95740-TL66 & VB-FIX
95740-72K: Requires F-95740-TL72 & VB-FIX

Clutch E Control Pressure Regulator Valve
- Bumpy 1-2 upshift
- 2-1 Downshift flare or neutral
- EDS 4 control code

Replace with Sonnax Part No.
95740-28K* Boost Valve Kit
95740-66K Oversized Valve Kit, M-Shift Only
95740-72K Oversized Valve Kit, E-Shift Only
95740-66K: Requires F-95740-TL66 & VB-FIX
95740-72K: Requires F-95740-TL72 & VB-FIX

Clutch Cooling Valve
- Burned A Clutch
- Burned D Brake

Bypass Clutch Control Regulator Valve
- Converter overheat & low release pressure
- Excessive TCC slip/cycling RPM
- Firm up/downshifts
- TCC related codes

Replace with Sonnax Part No.
95740-73K Requires F-95740-TL73 & VB-FIX

Clutch A Latch Valve
- Burned A Clutch
- 4-5 Shift complaints

End Plugs
Inconsistent shift quality

Replace with Sonnax Part No.
95740-30K*

Vacuum test these plugs at the retainer slot. This checks both diameters of the plug.

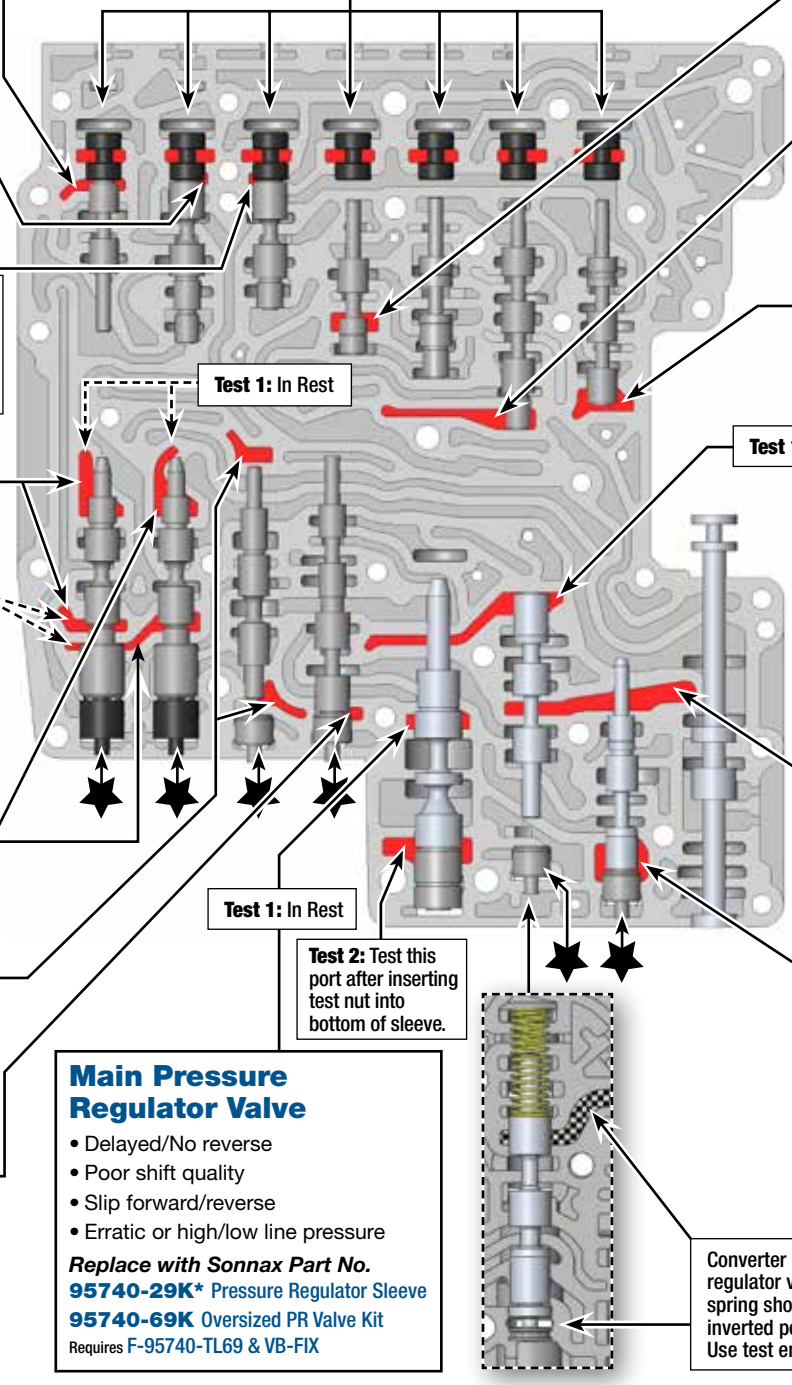

Main Pressure Regulator Valve
- Delayed/No reverse
- Poor shift quality
- Slip forward/reverse
- Erratic or high/low line pressure

Replace with Sonnax Part No.
95740-29K* Pressure Regulator Sleeve
95740-69K Oversized PR Valve Kit
Requires F-95740-TL69 & VB-FIX

*Part numbers with an asterisk (*) are included in this Zip Kit. Other part numbers are available separately.

©2016 Sonnax Industries, Inc.

800-843-2600 • 802-463-9722 • F: 802-463-4059 • www.sonnax.com

For specific vacuum test information, refer to individual part instructions included in kits and available at **www.sonnax.com**.

Upper Valve Body • ZF6HP21, Generation 2, M-Shift Shown Here

Clutch D2 Brake Latch Valve
- 1st/2nd Shift complaints
- EDS 6 codes
- Burned D brake

Test part after inserting test nut into bottom of bore.

Shift Valve 1
No fail safe

Clutch D1 Brake Latch Valve
- 1st/2nd Shift complaints
- EDS 6 codes
- Burned D brake

Converter Release Regulator Valve
- Excessive TCC slip RPM & related codes
- Harsh lockup apply & release
- Harsh downshifts
- Converter overheat

Replace with Sonnax Part No.
95740-05K
Requires F-95740-TL5 & VB-FIX

Test 2: Test this port with valve in inverted position. Hold valve and spring in place with enclosed testing end plug.

Lubrication Control Valve
- Excessive cooler pressure (ruptured hoses or cooler)
- Bushing and/or planet overheat

Replace with Sonnax Part No.
95740-71K Requires F-95740-TL71 & VB-FIX

End Plugs
- Loss of critical line & SLT pressures
- Shift complaints
- Burnt clutches & brakes

Replace with Sonnax Part No.
95740-27K* **NOTE:** Several Locations = ★

OE accumulator pistons should be flush with or approximately .030" lower than the casting surface. It is common for the rubber insert to lose tension.

Each of these pistons can be vacuum tested from the exhaust hole on the opposite side of the casting.

Accumulator Pistons
- Firm up/downshifts & harsh engagement
- Erratic EDS solenoid control/EDS codes

Replace with Sonnax Part No.
95740-15K*

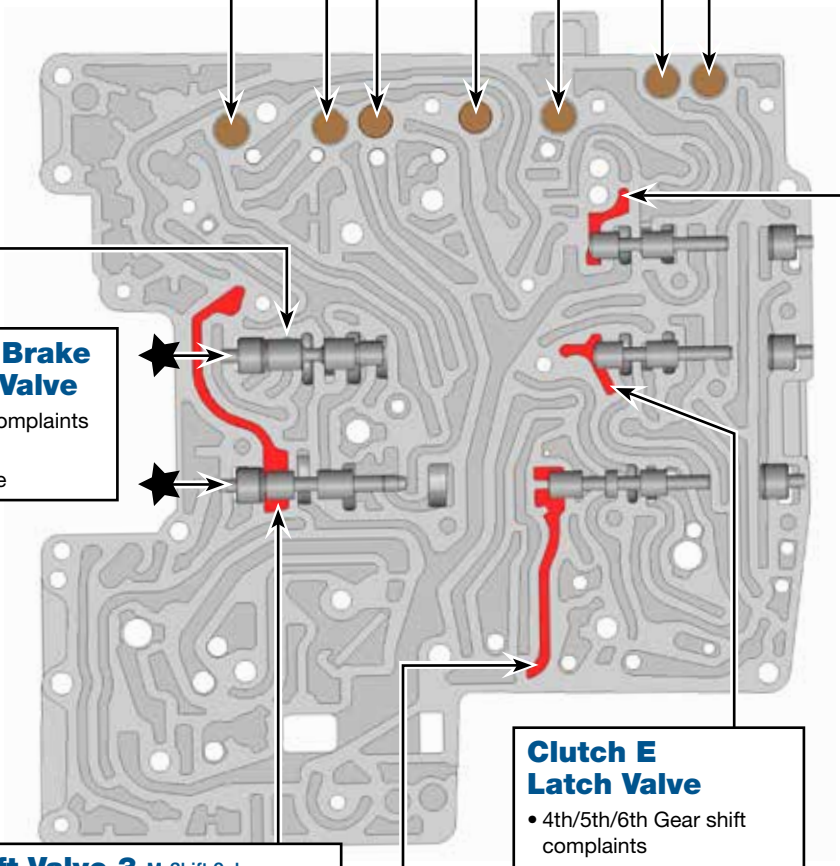

Clutch D1 Brake Regulator Valve
- 1st/2nd Shift complaints
- EDS 6 codes
- Burned D brake

Clutch E Latch Valve
- 4th/5th/6th Gear shift complaints
- EDS 4 codes

Shift Valve 3 M-Shift Only
- Harsh reverse engagement
- Burned D1 Brake

Position Valve E-Shift Only
- Burnt clutches A, B & E
- Various shift complaints

Replace with Sonnax Part No.
95740-74K Oversized Kit, M-Shift Only
95740-75K Oversized Kit, E-Shift Only
95740-74K Requires F-95740-TL74 & VB-FIX
95740-75K Requires F-95740-TL75 & VB-FIX

Shift Valve 2
- Burnt clutches A & E
- Shift complaints

Solenoid Pressure Regulator Valve
- Soft shifts, poor line rise
- High line pressure during stall test
- Loss of 1-2 or 4-5 shift
- Delayed forward/reverse engagement
- 5-4 or 4-3 flare
- Gear ratio codes

Replace with Sonnax Part No.
95740-64K Requires F-95740-TL17 & VB-FIX

*Part numbers with an asterisk (*) are included in this Zip Kit. Other part numbers are available separately.

©2016 Sonnax Industries, Inc.

OE Exploded View

Lower Valve Body • ZF6HP21, Generation 2, M-Shift Shown Here

NOTE: Depending upon vehicle application, the OE springs, checkballs and worm tracks may vary.

Lower Valve Body Descriptions	
I.D. No.	**Description**
101	Parking Lock Valve in E-Shift
101	Manual Valve in M-Shift
102	Lubrication Control Valve
103	Converter Release Regulator Valve
104	Main Pressure Regulator Valve
105	Bypass Clutch Control Regulator Valve
106	Clutch Cooling Valve
107	Clutch E Control Pressure Regulator Valve (inboard) Boost Valve & Sleeve (outboard)
108	Clutch A Control Pressure Regulator Valve (inboard) Boost Valve & Sleeve (outboard)
109	Park Lock Cylinder in E-Shift
109	Empty in M-Shift
110	Clutch D1 Brake Latch Valve
111	Shift Valve 1
112	Clutch D2 Brake Pressure Regulator Valve
113	Clutch D2 Brake Latch Valve
114	Clutch C Control Pressure Regulator Valve
115	Clutch B Control Pressure Regulator Valve
116	Clutch A Latch Valve

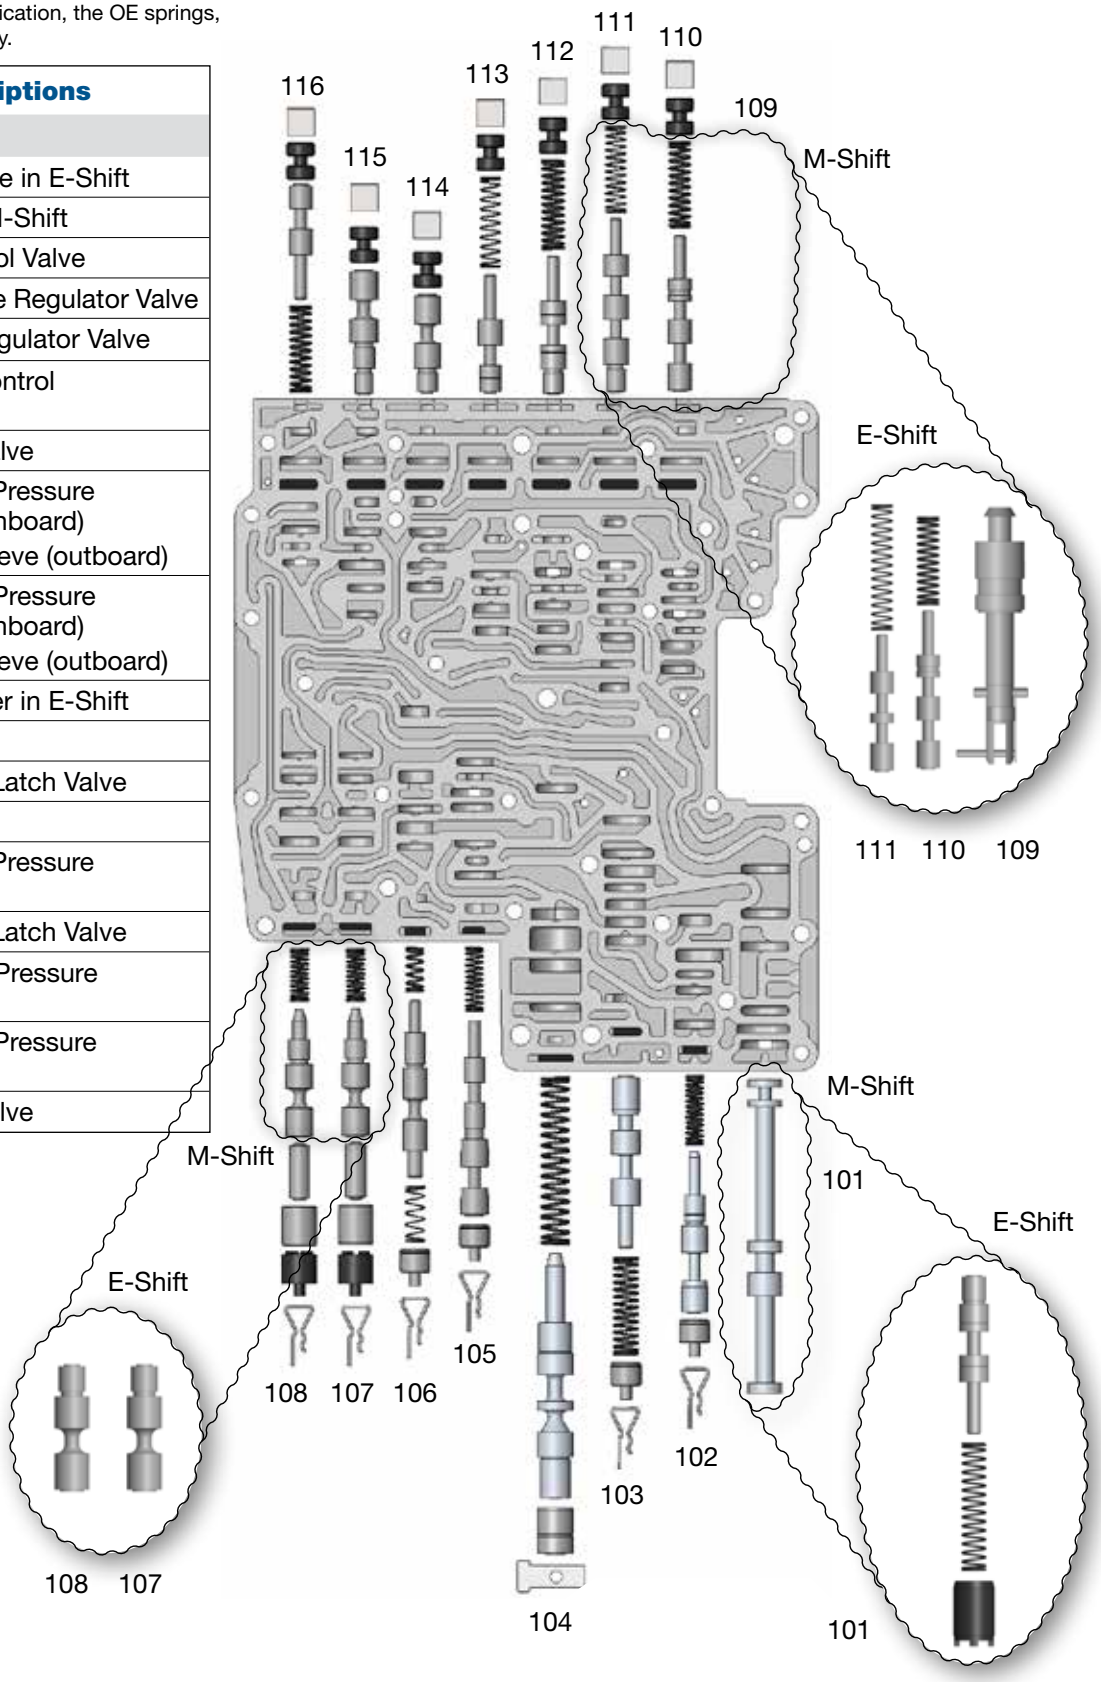

©2016 Sonnax Industries, Inc.

800-843-2600 • 802-463-9722 • F: 802-463-4059 • www.sonnax.com

Upper Valve Body • ZF6HP21, Generation 2, M-Shift Shown Here

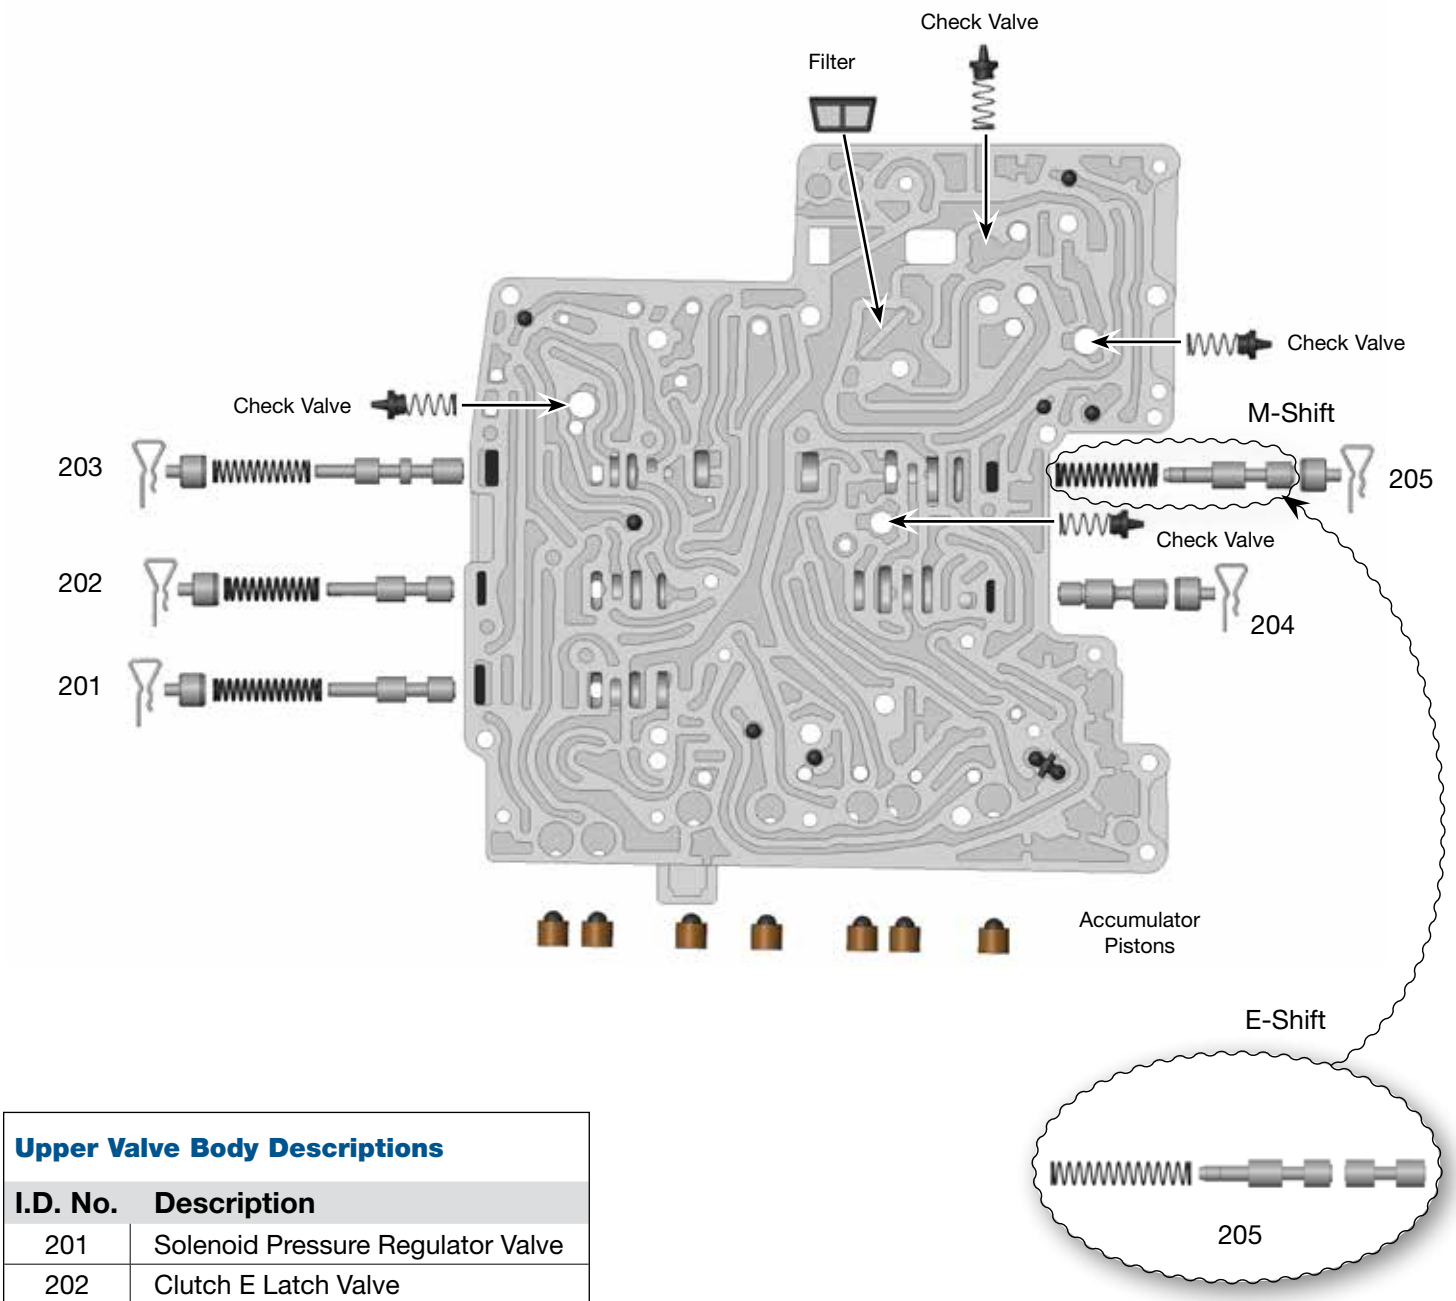

Upper Valve Body Descriptions	
I.D. No.	**Description**
201	Solenoid Pressure Regulator Valve
202	Clutch E Latch Valve
203	Shift Valve 2
204	Clutch D1 Brake Regulator Valve
205	Shift Valve 3 in M-Shift
205	Position Valve in E-Shift

©2016 Sonnax Industries, Inc.

Technical Tips (continued from page 3)

ZF Solenoid O-Ring Sizes Figure 14

Connector Color	Snout Color	Inboard O-Ring Size	Outboard O-Ring Size
Yellow / Green**	Black	10.5 x 2mm	13.5 x 2mm
Blue / Black / Gray**	Yellow	10.5 x 2mm	13 x 2mm
Orange	Orange	10.5 x 2mm	14.5 x 2mm
Black (Typical MV1 solenoid in Gen 1 & MV2 solenoid on E-Shifts)	Short Black	14.5 x 1.5mm	14.5 x 1.5mm

CAUTION **NOTE:** Solenoid connector colors can fade with high mileage and high temperature. Example: blue can look like green and yellow can look like tan.

ZF Solenoid Function Figure 15

Connector Color	Location	Output	Resistance at 68˚F (20˚C)	Function
Generation 1: ZF6HP19, ZF6HP26, ZF6HP32				
Yellow / Green**	EDS 1, 3, 6	0 psi (0 bar) at 0 mA	5.05 ohms	1 – A Clutch; 3 – C Brake; 6 – TCC
Blue / Black /Gray**	EDS 2, 4, 5	67 psi (4.6 bar) at 0 mA	5.05 ohms	2 – B Clutch; 4 – D & E Clutch; 5 – EPC
Black	MV1	Open/Closed	11.5 ohms	Selector Valve
Black	MV2	Open/Closed	11.5 ohms	Park Lock Valve
Green	MV3	Open/Closed	11.5 ohms	Park Lock Cylinder
Generation 2: ZF6HP21, ZF6HP28, ZF6HP34				
Orange	EDS 1, 2	0 psi @ 0mA	5.05 ohms	1 – A Clutch; 2 – TCC
Yellow	EDS 4, 5, 6	0 psi @ 0 mA	5.05 ohms	4 – E Clutch; 5 – C Clutch; 6 – D1 & D2 Brake
Blue	EDS 3, 7	67 psi @ 0mA	5.05 ohms	3 – B Clutch; 7 – EPC
Black	MV2	Open/Closed	11.5 ohms	Park Lock Valve
Green	MV3	Open/Closed	11.5 ohms	Park Lock Cylinder

** = Found on some Audi applications

Ford Solenoid O-Ring Sizes Figure 16

Connector Color	Snout Color	Inboard O-Ring Size	Outboard O-Ring Size
Ford 2007–2009: 6R60			
Brown	Long Black	10.5 x 2mm	13.5 x 2mm
Black	Long Black	10.5 x 2mm	13 x 2mm
Cream	White	OR-014	OR-016
Ford 2010–Later: 6R60			
Tan	Brown	10.5 x 2mm	13.5 x 2mm
Tan	Black	10.5 x 2mm	13 x 2mm
Tan (2010–2011)	White	OR-014	OR-016
Tan (2012–Later)	Gray	OR-014	OR-016

TECH TIP! **TECH TIP:** Solenoids in these units (especially the more active solenoids) commonly malfunction, leading to hydraulic control trouble, requiring solenoid replacement in many cases.

Ford Solenoid Function Figure 17

Connector or Snout Color	Location	Output	Resistance at 68˚F (20˚C)	Function
Ford 2007–2009: 6R60				
Brown	SSA, SSC, TCC, VFS1, VFS3, VFS6	0 psi (0 bar) at 0 mA	5.05 ohms	1 – A Clutch; 3 – C Brake; 6 – TCC
Black	SSB, SSD, PCA, VFS2, VFS4, VFS5	67 psi (4.6 bar) at 0 mA	5.05 ohms	2 – B Clutch; 4 – D & E Clutch; 5 – EPC
Cream	SSE/SS1	Open/Closed	11.5 ohms	Solenoid Multiplex/Drive Enable Valve
Ford 2010 – Later: 6R60/6R80				
Brown	SSA, SSC, TCC, VFS1, CFS3, VFS6	0 psi @ 0 mA	5.05 ohms	1 – A Clutch; 3 – C Brake; 6 – TCC
Black	SSB, SSD, PCA, VFS2, VFS4, VFS5	67 psi (4.6 bar) at 0 mA	5.05 ohms	2 – B Clutch; 4 – D & E Clutch; 5 – EPC
Cream (2010–2011)	SSE/SS1	Open/Closed	11.5 ohms	Solenoid Multiplex/Drive Enable Valve
Gray (2012–Later)	SSE/SS1	Open/Closed	18 ohms	Solenoid Multiplex/Drive Enable Valve

©2016 Sonnax Industries, Inc.

800-843-2600 • 802-463-9722 • F: 802-463-4059 • www.sonnax.com