Unit Endplay Shim

36402-Z
10 Shims — 4 slots, .010" thick

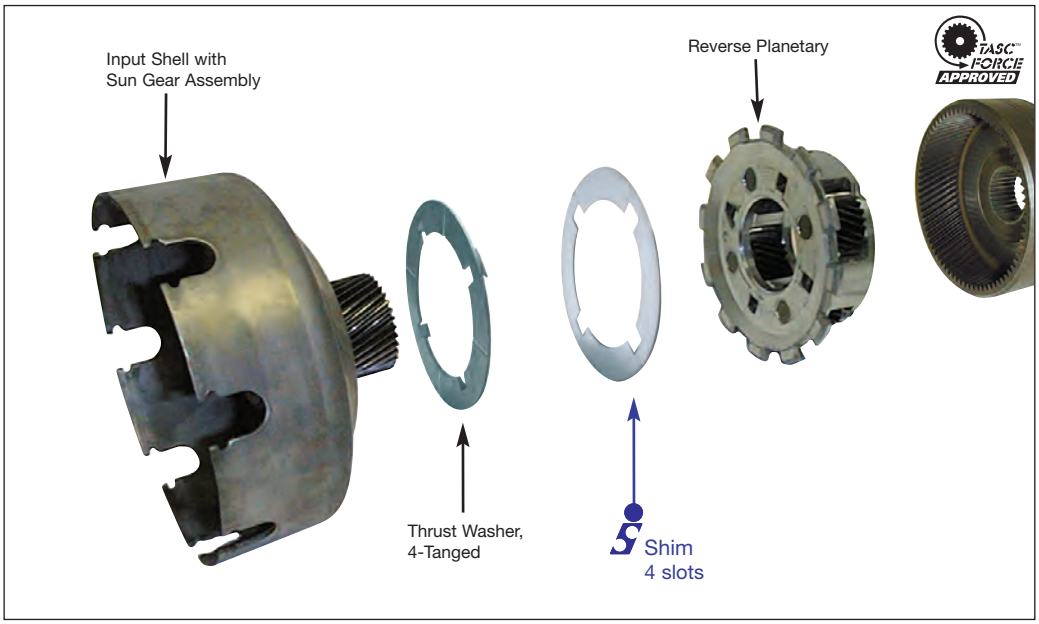

Installation Instructions

When visible spline or driveline wear is evident, it is beneficial to install a .010" shim(s) during lower unit assembly. The Sonnax shim should be installed under the 4-tanged thrust washer located between the reverse planetary carrier and input shell. When final assembly is completed, total endplay should be inspected with an H gauge, depth mic, or dial caliper. The OEM endplay specification is .075". The recommended endplay is .040" or less. This shim does not reduce output shaft free play.

Note: The Sonnax shim will not fit in late-model applications with 6 pinion carriers.

©2005
800-843-2600 • 802-463-9722 • F: 802-463-4059 • www.sonnax.com • info@sonnax.com