

SonnaFlow® Output Signal Adapter Kit


Part No.

FM-03K

- Output Signal Adapter
- Heat Shrink Tube

NOTE: This kit is intended to be used with the SonnaFlow® flow meter diagnostic tool kit **FM-01KA**.

NOTE: **FM-01KA** and **FM-22** are no longer available. Please check with your distributor for availability.

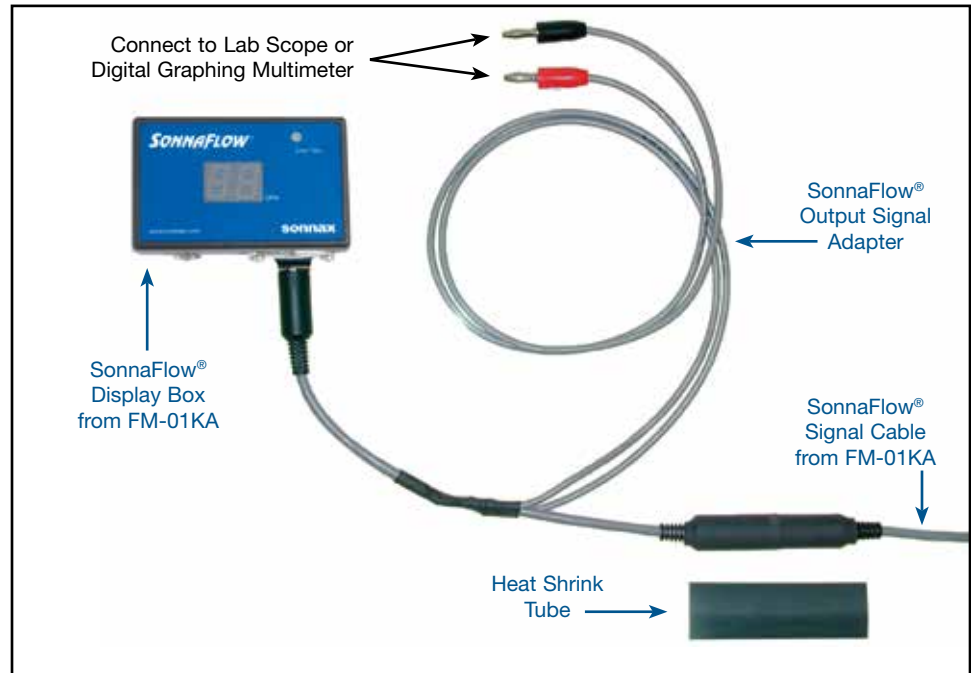

The SonnaFlow output signal adapter kit **FM-03K** installs between the SonnaFlow signal cable and display box (both included in **FM-01KA**) as shown.

To apply the heat shrink tubing, connect the output signal adapter to the signal cable as shown, then slide the heat shrink into place so it covers both the connector halves. Apply a moderate heat source to the heat shrink until it is securely wrapped around the connectors. If needed, the heat shrink can be removed by cutting it with a sharp knife.

NOTE: Instructions and more information on using this kit are included in the SonnaFlow technical manual **FM-22** that comes with the basic SonnaFlow kit **FM-01KA**.