

## Filter Extension Kit

### Part No.

## 28801-S09K


- Filter Extension Casting
- Filter Gaskets (2)
- Extension Screws (2)
- Pan Screws (2)
- Lock Washers (2)

**WARNING:** For use with Sonnax oil pan kit 28801-S which is no longer in production. Please check with distributor for availability.

Also Available

**Oil Pan Stud Kit**  
28711-01K

## GM Powerglide

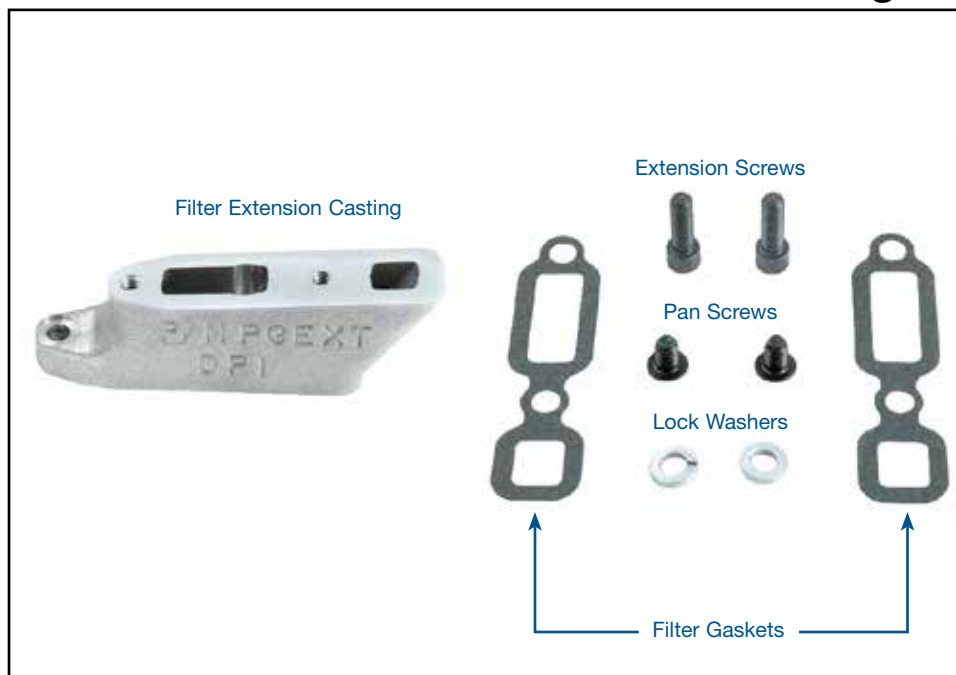

1. Remove and discard the existing filter, filter gasket and filter mounting hardware.
2. Thoroughly clean the filter mounting surface on the valve body by removing any dirt, sludge or remaining gasket material.
3. Mount the oil filter extension (**Item 1**). Place a filter gasket (**Item 2**) between the extension and the filter mounting surface of the valve body. Fasten the extension using the 1/4"-20 x 3/4" socket head cap extensions screws (**Item 3**) and lock washers (**Item 4**).
4. Mount a new oil filter (**Item 6**) to the extension placing a filter gasket between the filter and the extension. Fasten the filter using the 1/4"-20 x 3/8" button head cap pan screws (**Item 5**).

**NOTE:** The new filter is not included in the kit.

