

HIGH PERFORMANCE TORQUE CONVERTER PARTS

Instructions

GM 6L80, 6L90 (258mm), Multi-Plate Unit Size: 300mm • Core: GM 258mm • Dampered: No • Turbine Hub Input Spline Count: 36

JMBX Performance Converter Kit

Part No. **GM-RK-688**

- Pilot
- 36-Tooth Turbine Hub
- Rivets (20)
- Sprag Cartridge
- Impeller Hub

Patent No. 6,902,046



NOTE: Street/Strip applications only. For use with GM 258mm early-style stators only. This kit must be completed with

Sonnax included multi-plate base kit and additional OE salvaged parts.

Included:

Multi-Plate Base Kit


Part No.

GM-RK-20M

- Front Cover
- Washer Vespel® • O-Ring
- Seal PTFE
- Clutch Plate with HTE Frictions
- Internal Splines • Clutch Plate with HTE Frictions
- External Splines • Damperless Piston
- Thrust Bearing Turbine Side
- Thrust Bearing Impeller Side



NOTE: The impeller and turbine must be furnace-brazed.

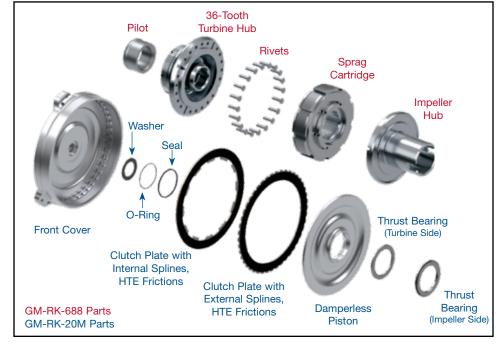

1. Front Cover Assembly


- a. The front cover must be machined to fit the GM 258mm converter core parts (Figure 1).
- b. The pilot is a sliding-fit to light press-fit on the cover. Insert Sonnax pilot all the way to the back surface of the cover and weld in place at the pilot inside diameter.




CAUTION: Weld the pilot on the cover before assembling the rest of the converter to prevent heat damage to the Vespel washer.

2. Damperless Piston Assembly

- a. Install Sonnax internal spline clutch plate, followed by Sonnax external spline clutch plate. External spline plate will engage in the cover splines.
- b. Place Sonnax piston over clutch plates. Rotate piston until it drops and engages with internal spline clutch plate.
- c. Place Sonnax Vespel washer on Sonnax turbine hub, using assembly gel to hold washer in place.
- d. Insert turbine hub into piston and check clutch release clearance with a feeler gauge. It should measure between .040-.055" (Figure 2).

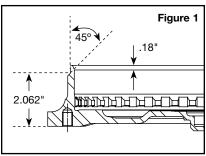

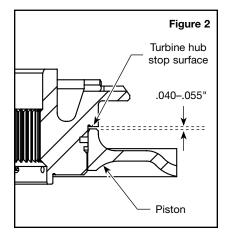

Fluorocarbon



HIGH PERFORMANCE TOROUE CONVERTER PARTS

JMBX PERFORMANCE CONVERTER KIT GM-RK-688, GM-RK-20M

Instructions

2. Damperless Piston Assembly (continued)


- e. If additional clutch release clearance is needed, the turbine hub stop surface can be machined.
- f. Remove turbine hub from the cover assembly.

3. Turbine Assembly

- a. The early-style turbine has only twelve rivet holes. If this turbine is used, twelve additional holes will be needed. Sonnax turbine hub can be used as a drill guide for the additional holes.
- b. Align four of the turbine holes with four of the turbine hub oil slots (**Figure 3**).
- c. Flip the turbine over so the turbine hub is on top. Ensure the holes and slots are still aligned.
- d. Insert four Sonnax rivets 90° apart to keep the turbine hub from rotating.
- e. Drill the missing twelve holes in the turbine using an 11/64" drill bit, for a total of 24 holes.

CAUTION: Only twenty rivets are used; the four other turbine holes and turbine hub slots are used for oil passages. Do not plug these four holes with rivets or weld bead!

f. Rivet turbine hub to turbine.

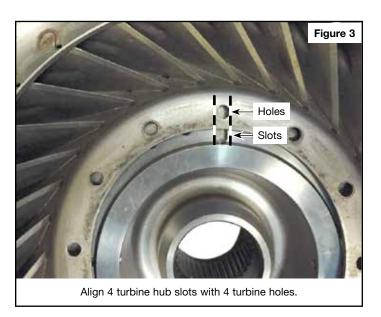

4. Piston & Clutch Plate Assembly

- a. Install clutch plates and piston (see step 2 "Damperless Piston Assembly").
- b. Install Sonnax O-ring, then the Sonnax PTFE seal onto turbine hub.
- c. Place Sonnax Vespel washer on the turbine hub pilot using assembly gel to hold it in place.
- d. Insert turbine/turbine hub assembly into piston, ensuring the turbine drops into piston as far as it can go.

5. Sprag Cartridge Installation

The Sonnax sprag cartridge comes preassembled.

- a. Remove impeller-side snap ring from OE stator (thinner blade-side). Leave turbine-side snap ring installed.
- b. Remove and discard OE clutch and stator caps.
- c. Select the small Sonnax thrust bearing provided in base kit GM-RK-20M. Place bearing on Sonnax turbine-side stator cap.



NOTE: The two stator caps appear identical but are not. The smaller thrust bearing does not fit the impeller-side cap.

- d. Insert Sonnax sprag cartridge with small thrust bearing oriented toward turbine-side of stator.
- Install Sonnax impeller-side stator cap and secure with OE snap ring.

6. Converter Assembly

- a. Place small Sonnax thrust bearing and stator assembly on turbine hub, thin blade-side on top. Place large Sonnax thrust bearing on the stator assembly, then place impeller and impeller hub on bearing and weld impeller to the cover
- b. The overall height for this 6L80, 6L90 (258mm) performance converter is 6.150".