



# GM 6T70/75/80 (Gen. 2) ZIP KIT®



PART NUMBER 6T70-G2-ZIP

IDENTIFICATION GUIDE



## GM Gen. 1 6T70/75

## GM Gen. 2 6T70/75/80

### TEHCMs

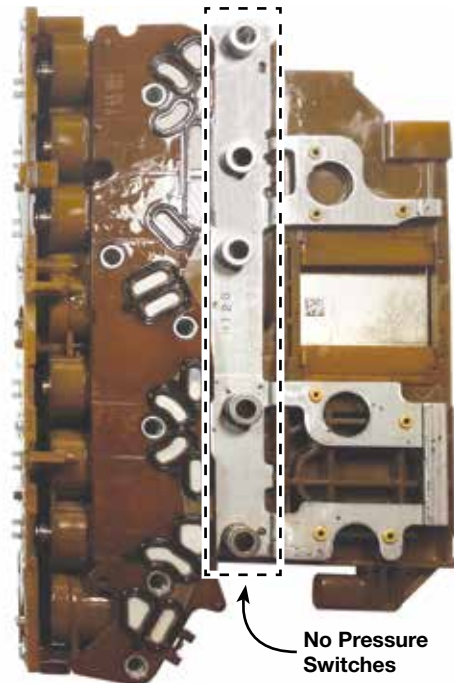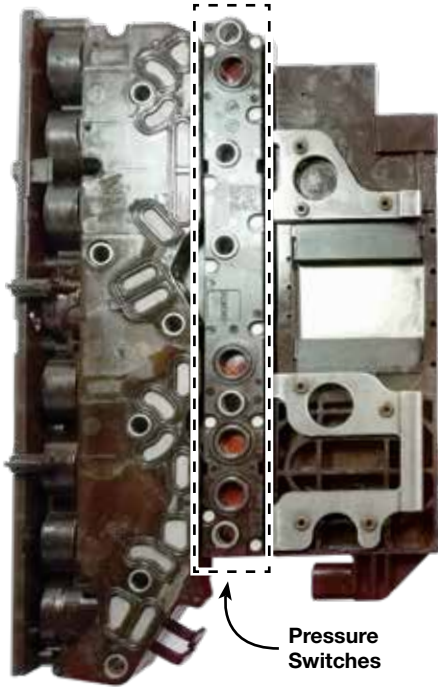


### LOWER VALVE BODIES

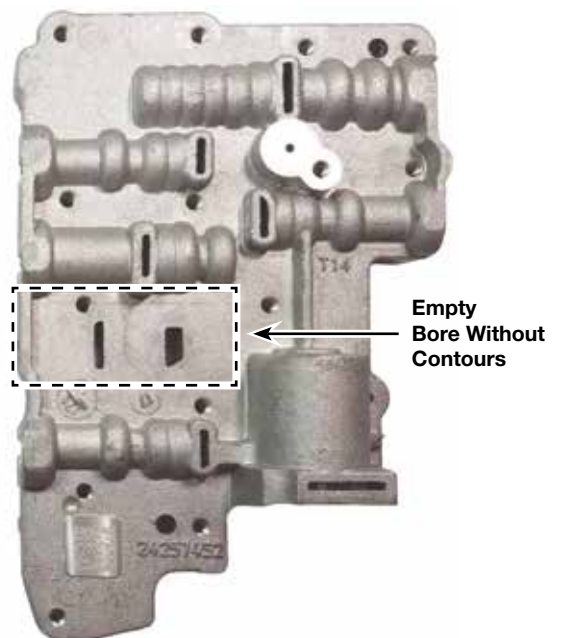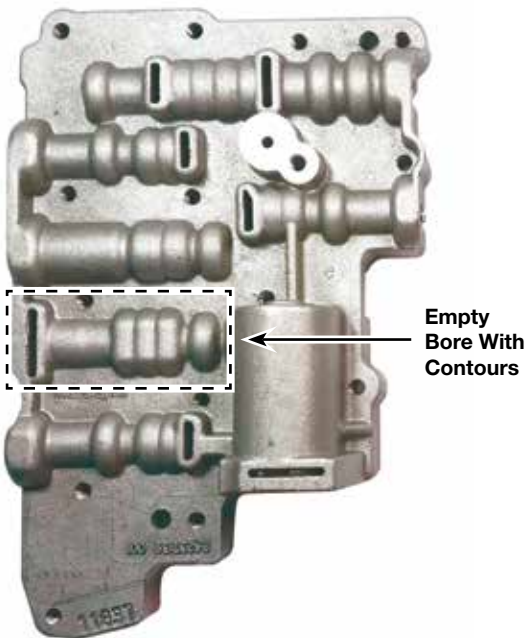


**GM Gen. 1 6T70/75**

**GM Gen. 2 6T70/75/80**


**SEPARATOR PLATES**

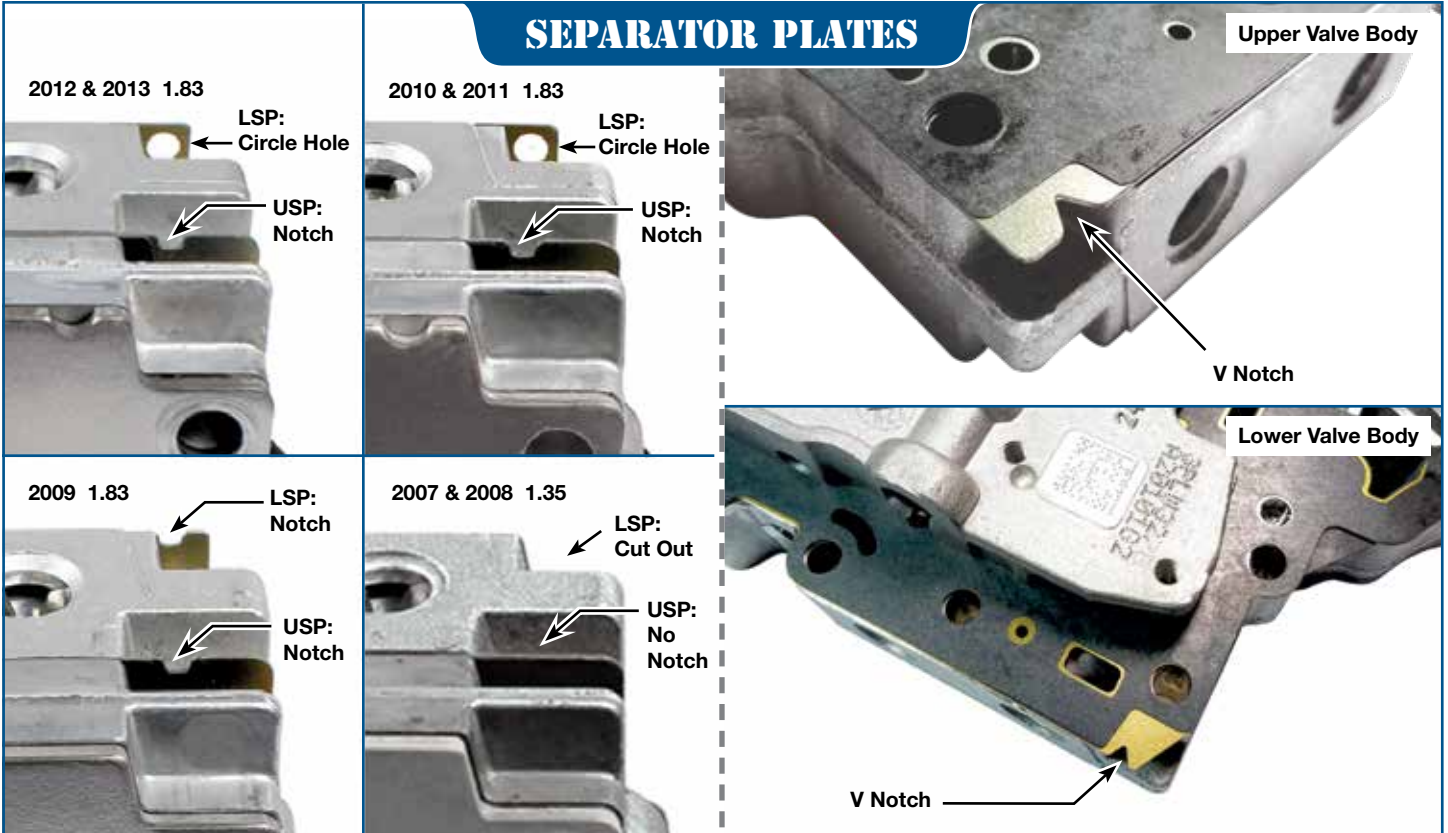

**SOLENOID DAMPERS**

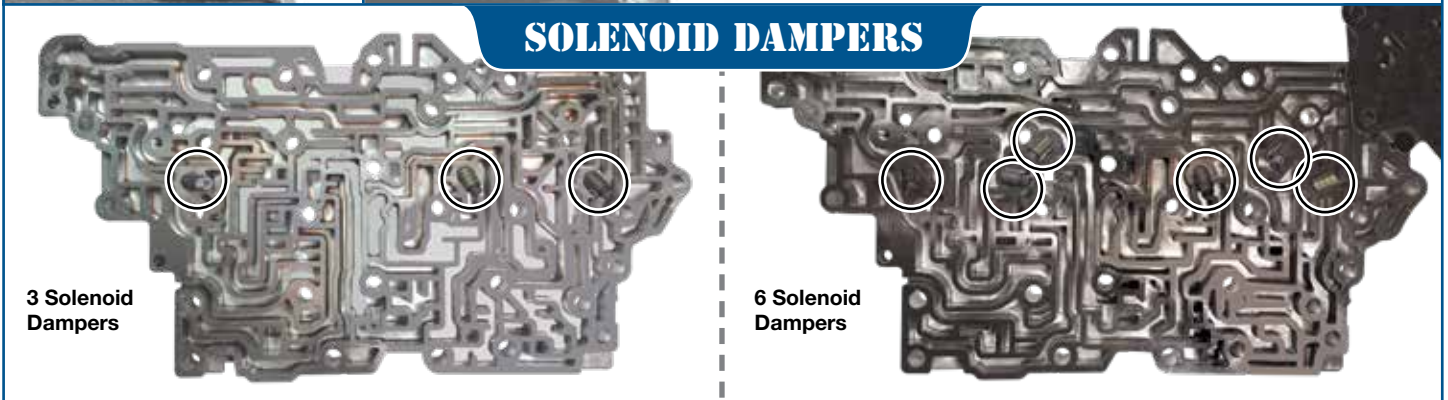

**CHECKBALL**

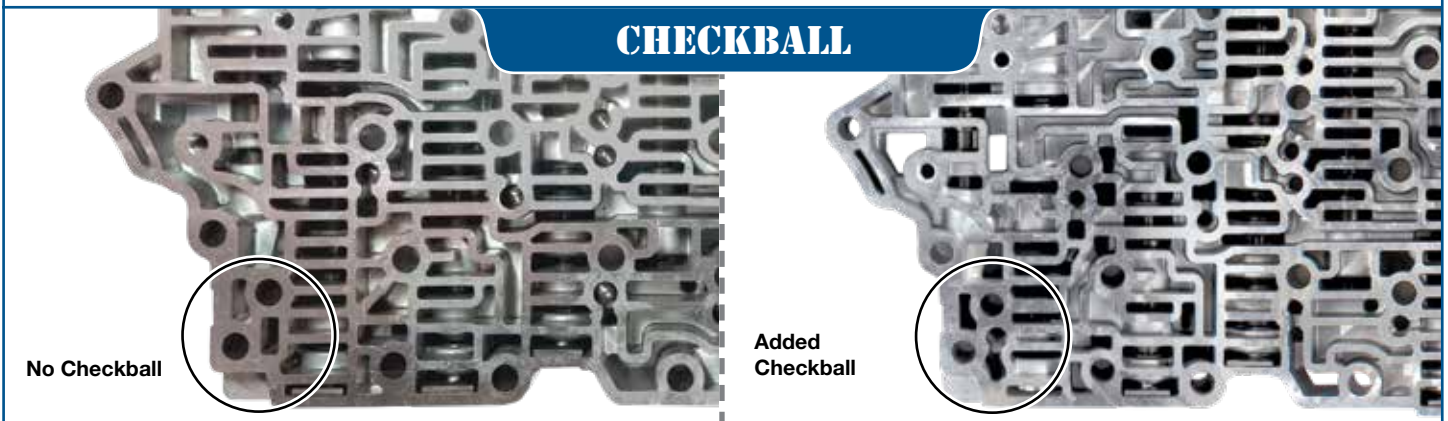



# GM 6T70/75/80 (Gen. 2) ZIP KIT®

PART NUMBER 6T70-G2-ZIP


QUICK GUIDE

Parts are labeled here in order of installation. See other side of sheet for details on kit contents.



**CAUTION!** Ensure shuttle valve is installed with blind bore facing inboard and rounded, closed end facing the end plug.

## INSTALLATION DIAGRAM

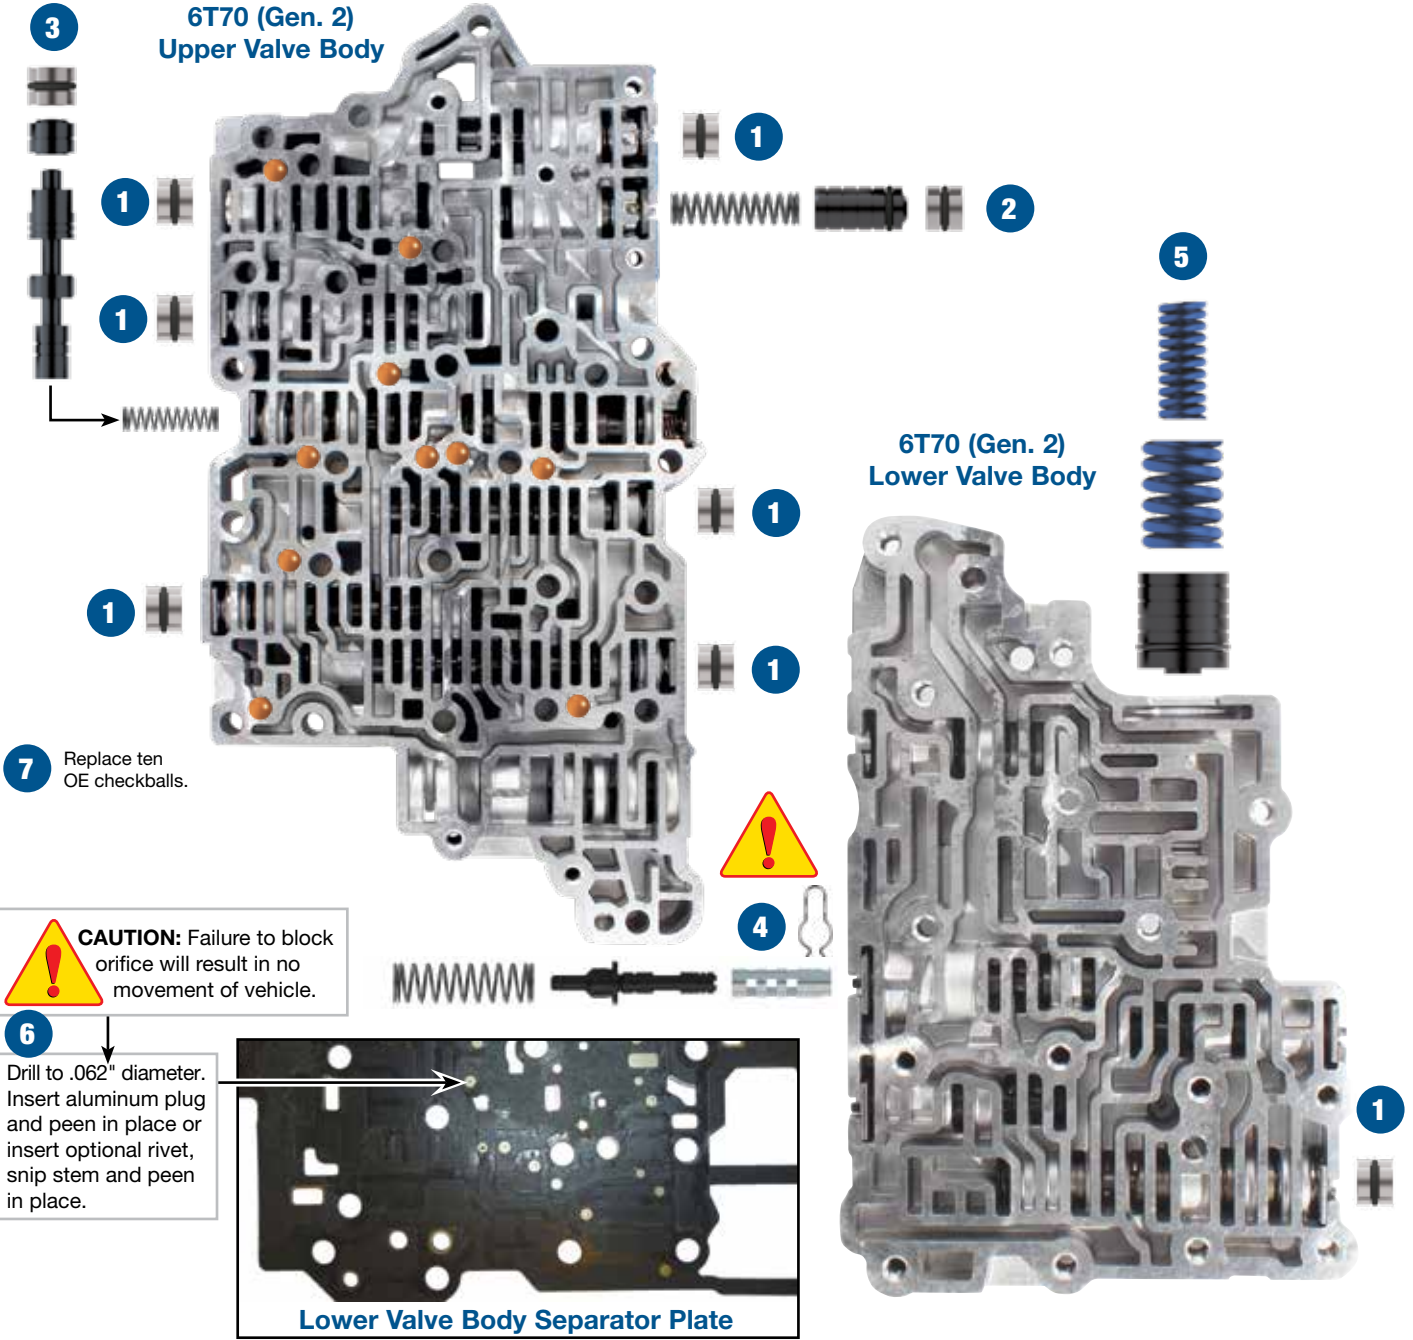

In addition to general rebuilding tips and technical information, the technical booklet included in this kit contains vacuum testing and additional repair options for higher mileage units or for repairing specific complaints which are beyond the scope of this kit.

## Step 1 Replace Seven OE End Plugs

Place O-ring into end plug groove. Lubricate with Sonnax Slippery Stick **O-LUBE** and roll on bench to size.

### Packaging Pocket 1

- End Plug (7)
- O-Rings (11) 4 Extra

## Step 2 Replace OE Isolator Valve & Spring

Place one O-ring into plug groove and one O-ring into isolator valve groove. Lubricate with Sonnax Slippery Stick **O-LUBE** and roll on bench to size.

### Packaging Pocket 2

- End Plug
- Valve
- Spring
- O-Rings (3) 1 Extra

## Step 3 Replace OE TCC Regulator Apply Valve Bore Lineup

Remove and discard all OE components except the end clip. Save OE end clip for reuse.



**CAUTION:** Ensure shuttle valve is installed with blind bore facing inboard and rounded, closed end facing the end plug.

### Packaging Pocket 3

- TCC Regulator Apply Valve
- Spring
- Shuttle Valve
- End Plug
- O-Rings (2) 1 Extra

## Step 4 Replace OE Actuator Feed Limit (AFL) Valve Lineup

Remove and discard OE valve and spring. Keep outboard OE retainer for reuse. Install Sonnax sleeve and valve as illustrated. Secure sleeve into bore by installing Sonnax clip into sleeve groove at inboard port. Install Sonnax spring and secure all components into the bore with OE retainer.



**CAUTION:** Ensure supplied retainer clip is fully seated in AFL sleeve groove after installation.

### Packaging Pocket 4

- Sleeve
- Valve
- Spring
- Clip

## Step 5 Replace OE 4-5-6 Accumulator Piston & Springs

Remove and discard OE piston and springs. Keep OE retainer for reuse. Place O-ring into piston groove. Lubricate with Sonnax Slippery Stick **O-LUBE** and roll on bench to size.

### Packaging Pocket 5

- Accumulator Piston
- Spring, Large
- Spring, Small
- O-Rings (2) 1 Extra

## Step 6 Block AFL Balance Port

Drill indicated separator plate orifice with included .062" dia. drill bit. Remove any burrs. If using straight plug, insert into orifice andpeen on both sides of plate. If using optional small rivet, insert into orifice and using wire cutters, snip the stem end of the rivet if/as necessary to provide for a small head once peened in place. Peen the rivet in place on head side of plate also. After peening on both sides of the plate, ensure plate will still fit flush on mating surfaces.



**CAUTION:** Ensure supplied retainer clip is fully seated in AFL sleeve groove after installation

### Packaging Pocket 6


- Drill Bit (.062" dia.)
- Aluminum Plugs (2) 1 Extra
- Rivets (3) 2 Extra

## Step 7 Replace OE Checkballs

### Packaging Pocket 7

- Checkballs, .250" dia. (10)

The parts listed here may be protected by patent numbers 8,919,381.

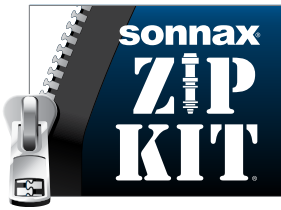

# GM 6T70/75/80 (Gen. 2) ZIP KIT®

PART NUMBER **6T70-G2-ZIP**

**INSTALLATION & TESTING BOOKLET**

## Valve Body ID & Tech Tips

### Adaptive Learning

The 6T70, 6T75 and 6T80 is equipped with several adaptive learning strategies. After valve body service, the existing adaptive values will need to be erased. Then a “Fast Learn” process should be performed. Reference GM material for proper “Fast Learn” process.

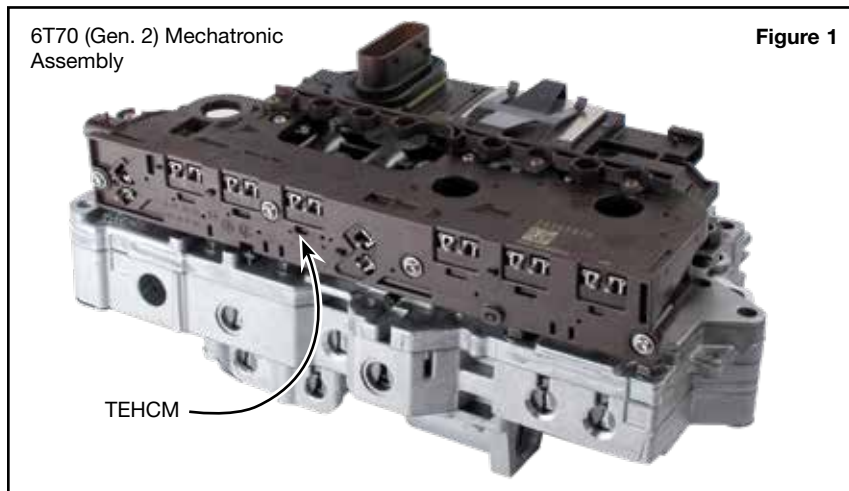


Figure 1

### Clutch Apply Chart

Figure 2

Gear	1-2-3-4 Clutch	3-5 Clutch	4-5-6 Clutch	2-6 Clutch	Low & Reverse Clutch	Low & Reverse One-Way Clutch
Park					X	
Reverse		X			X	
Neutral					X	
1st Breaking	X				X	Holding
Drive	1st	X				Holding
	2nd	X		X		
	3rd	X	X			
	4th	X		X		
	5th		X	X		
	6th			X	X	

### Solenoid Apply Chart

Figure 3

Gear	Solenoid					
	Shift Solenoid 1	Shift Solenoid 2	1-2-3-4 PC Solenoid 5 NL	2-6 PC Solenoid 4 NL	3-5 Rev. PC Solenoid 2 NH	Low Reverse 4-5-6 PC Solenoid 3 NH
Park	X	X				X
Reverse	X				X	X
Neutral	X	X				X
1st Breaking	X	X	X			X
Drive	1st	X	X			
	2nd		X	X		
	3rd		X	X		X
	4th		X	X		
	5th		X			X
	6th		X		X	

KEY: X = On/Applied

## Zip Kit Instructions

### 1. Valve Body Removal from Case

- Disconnect shift position switch.
- Disconnect input speed sensor (ISS).
- Disconnect output speed sensor (OSS).
- Remove four control valve body 80mm bolts (yellow). Position TCU spring retainer to the side.
- Remove the remaining seven control valve bolts (Figure 4).
- Remove TEHCM assembly.
- Remove solenoid filter plate (Figure 6) from the back of the TEHCM assembly. Discard and replace, as the seals take a set and will leak if reused.
- Remove the ten control valve body bolts (Figure 7).
- Remove manual shaft detent assembly.
- Remove control valve body from transmission.

### 2. Disassembly (Figure 8)

Remove the eight control valve body assembly bolts.

### 3. Installation


Install Zip Kit parts as shown on diagram of separate quick guide sheet included in this Zip Kit. Sonnax recommends vacuum testing critical wear areas not covered by this kit to determine whether additional Sonnax parts are required (see pages 5 & 6).

### 4. Reassembly

Reassemble valve body and reinstall the eight control valve body assembly bolts (Figure 8). Tighten to 106 in-lb (Figure 5).

### 5. Valve Body Reinstall to Case

- When reinstalling the manual shaft detent assembly, ensure proper alignment with the lever. Contact with the valve body can cause improper engagement with the lever (Figure 7).
- Reinstall the control valve body and manual shaft detent assembly into the transmission using 10 bolts (Figure 7). Hand tighten, then tighten in the indicated sequence to 106 in-lb (Figure 5).
- Install new solenoid filter plate (Figure 6).
- Reinstall TEHCM assembly and TCU spring retainer.

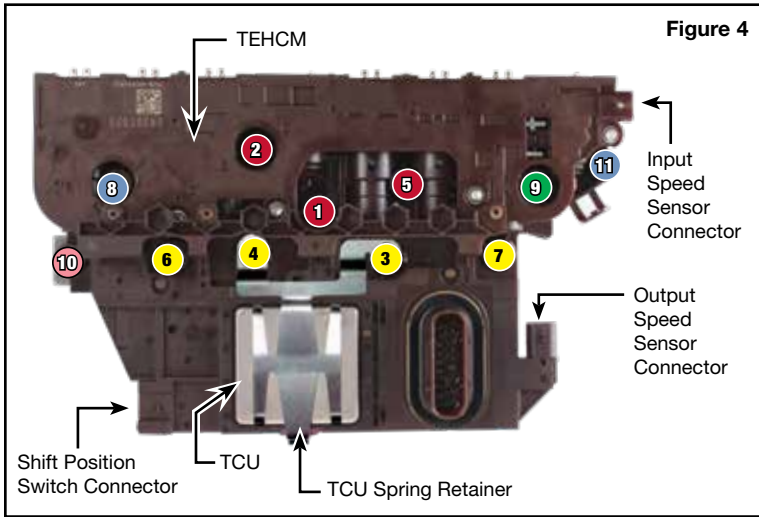

**Figure 4**

**6T70 Disassembly & Reassembly Bolts**

**Figure 5**


Bolt Color Code	Bolt Length	Torque
Orange	35mm	106 in-lb
Green	42mm	
Pink	55mm	
Blue	64mm	
Red	95mm	
Yellow	80mm	

**5. Valve Body Reinstall to Case, continued**


- e. Reinstall and hand tighten the 11 bolts, then tighten in the indicated sequence to 106 in-lb (**Figure 4**).
- f. Reconnect shift position switch.
- g. Reconnect input speed sensor (ISS).
- h. Reconnect output speed sensor (OSS).



**Figure 6**

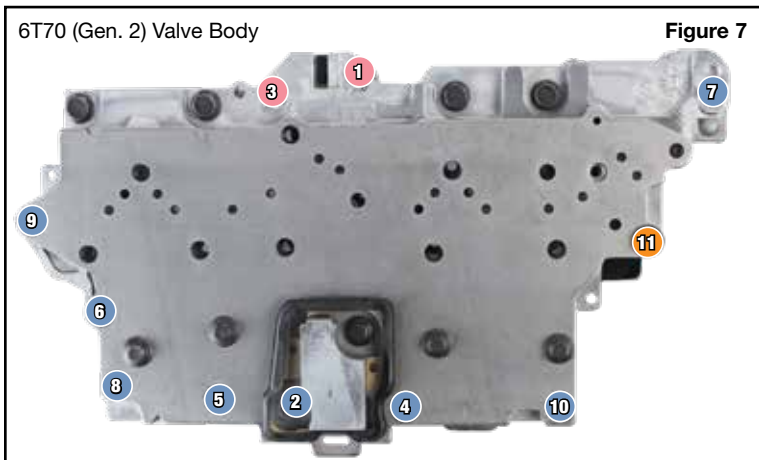

**Figure 7**

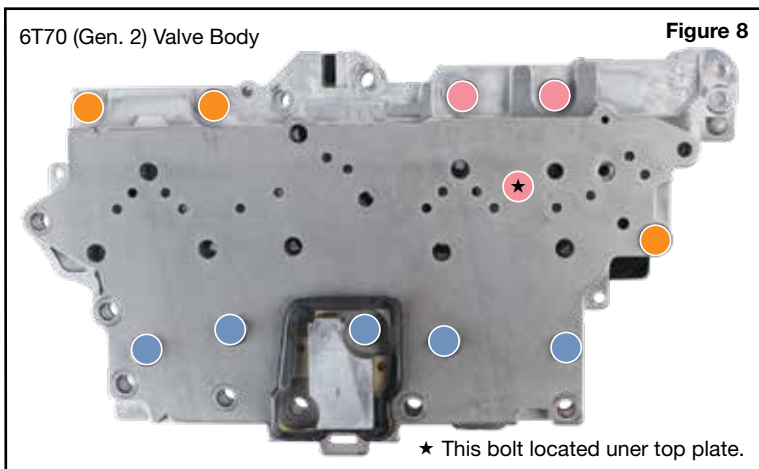

**Figure 8**

★ This bolt located uner top plate.

# Critical Wear Areas & Vacuum Test Locations




**NOTE:** OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear and Sonnax parts are noted for replacement.

## Upper Valve Body • 6T70 (Gen. 2)



For specific vacuum test information, refer to individual part instructions included in kits and available at [www.sonnax.com](http://www.sonnax.com).

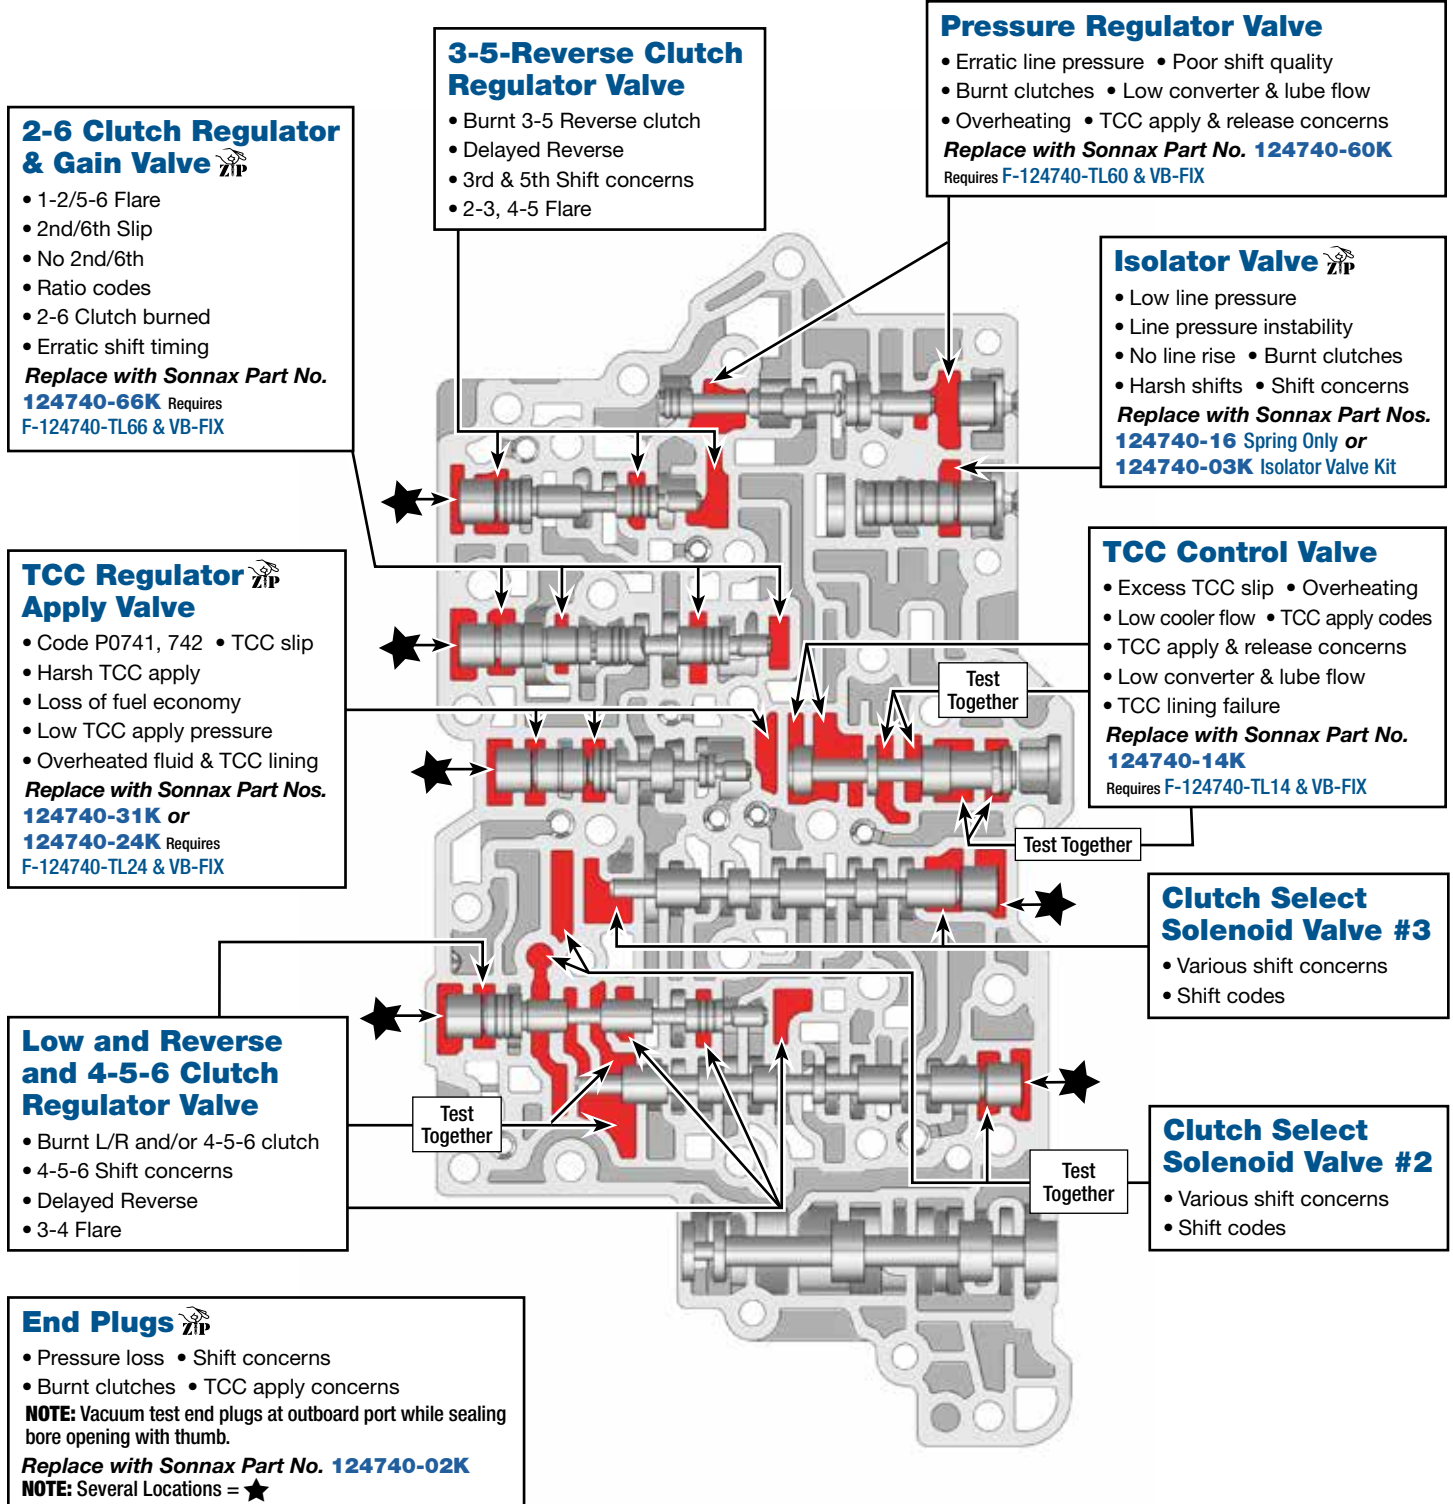


**Critical Wear Areas & Vacuum Test Locations**



Drop-In Zip Valve™  
Parts Available

**NOTE:** OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear and Sonnax parts are noted for replacement.

**Lower Valve Body • 6T70 (Gen. 2)**

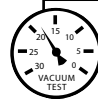

For specific vacuum test information, refer to individual part instructions included in kits and available at [www.sonnax.com](http://www.sonnax.com).

**3-5-R Clutch Boost Valve**

- Shift quality is not load sensitive
- Harsh shifts • Slips & flares
- Delayed engagement • Burnt clutches
- Slide shifts • Slip codes

**Replace with Sonnax Part No. 124740-56**

Requires F-144740-TL22 & VB-FIX

**Actuator Feed Limit Valve**

- Solenoid performance codes
- Wrong gear starts • Clutch failure

**Replace with Sonnax Part Nos. 124740-33K or 124740-48K**

Requires F-124740-TL48 & VB-FIX

**4-5-6 Clutch Boost Valve**

- Shift quality is not load sensitive
- Harsh shifts • Slips & flares
- Delayed engagement • Burnt clutches
- Slide shifts • Slip codes

**Replace with Sonnax Part No. 124740-56**

Requires F-144740-TL22 & VB-FIX

**4-5-6 Clutch Accumulator Piston**

- 3-4 Flare • Ratio codes
- 4-5-6 Clutch burned
- Slipping gears • 3-4 Harsh

**Replace with Sonnax Part Nos. 124740-57K or 124740-68K**

Sleeved

**1-2-3-4 Clutch Boost Valve**


- Shift quality is not load sensitive
- Harsh shifts • Slips & flares
- Delayed engagement
- Burnt clutches • Slide shifts
- Slip codes

**Replace with Sonnax Part No. 124740-56**

Requires F-144740-TL22 & VB-FIX

**1-2-3-4 Clutch Regulator Valve**

- Burnt 1-2-3-4 clutch
- Delayed Forward
- 1-2-3-4 Shift concerns

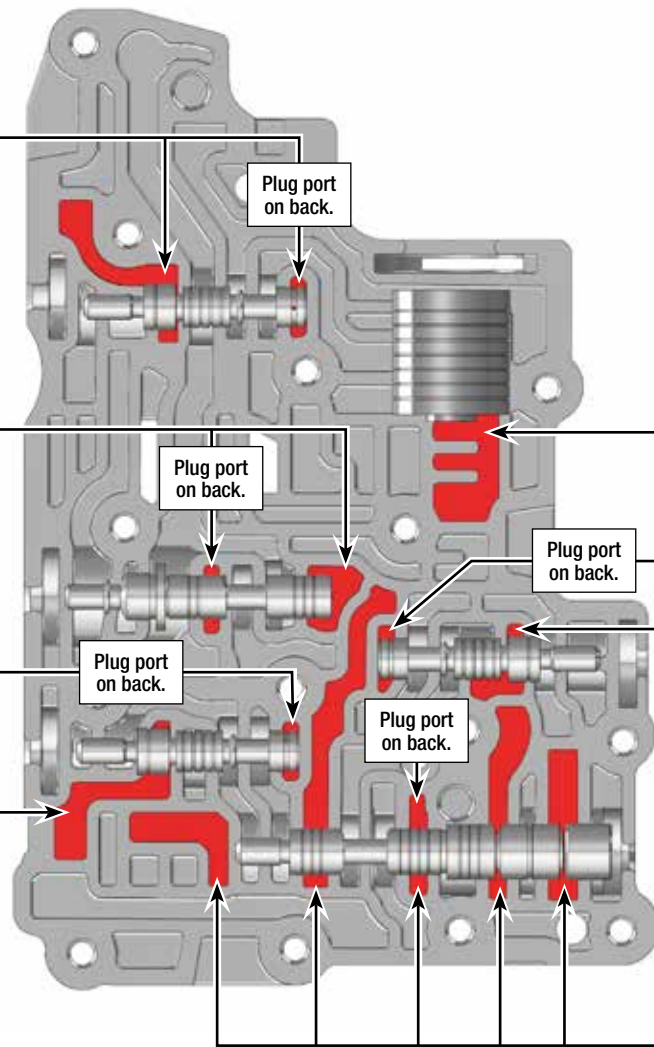

Plug port on back.

Plug port on back.

Plug port on back.

Plug port on back.


Plug port on back.

\*Part numbers with an asterisk (\*) are included in this Zip Kit.




## OE Exploded View

### Upper Valve Body • 6T70 (Gen. 2)

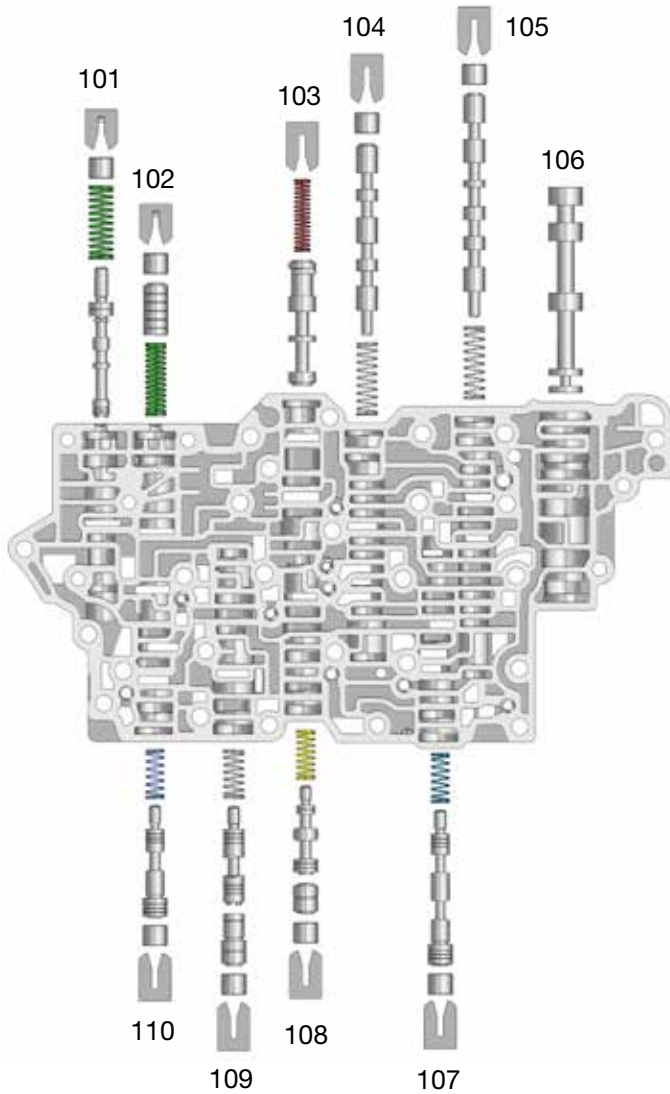

### Lower Valve Body • 6T70 (Gen. 2)

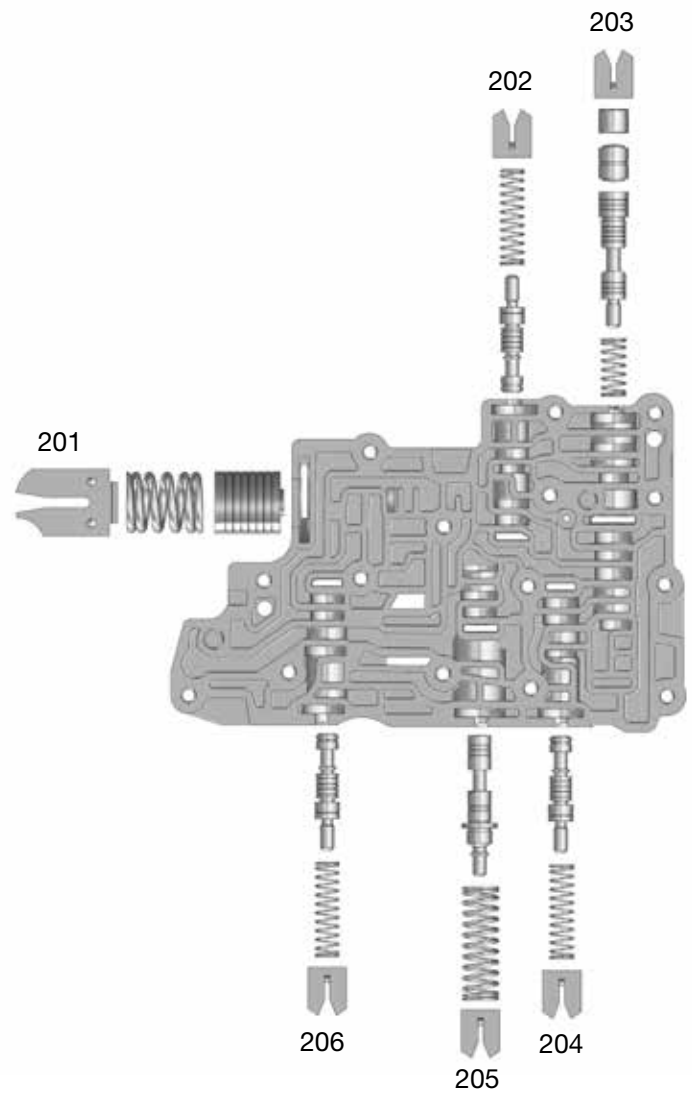

#### 6T70 (Gen. 2) Upper Valve Body Descriptions

I.D. No.	Description
101	Pressure Regulator Valve
102	Isolator Valve
103	TCC Control Valve
104	Clutch Select Solenoid Valve #3
105	Clutch Select Solenoid Valve #2
106	Manual Valve
107	Low & Reverse & 4-5-6 Clutch Regulator Valve
108	TCC Regulator Apply Valve
109	2-6 Clutch Regulator & Gain Valve
110	3-5-Reverse Clutch Regulator Valve

#### 6T70 (Gen. 2) Lower Valve Body Descriptions

I.D. No.	Description
201	4-5-6 Clutch Accumulator Piston
202	1-2-3-4 Clutch Boost Valve
203	1-2-3-4 Clutch Regulator Valve
204	4-5-6 Clutch Boost Valve
205	Actuator Feed Limit Valve
206	3-5-Reverse Clutch Boost Valve

**NOTE:** Depending upon vehicle application, the OE springs shown may not be present.



# Sonnax®

**Quality, Performance & Value You Can Trust**

## 6-Speed

**Sonnax Quality + Verified OE Performance**

Built with time-tested, industry-trusted parts and expertise from Sonnax, robust VBT 8000 testing  
**GUARANTEES OE performance from these valve bodies.**

## Remanufactured Valve Bodies

**Newest Units!**

**FORD**

**6F50**

**6R140**

**Chrysler 62TE**

**RFE Universal\***

**Toyota/Lexus**

**U660E/F**

**GM**

**Gen. 1 6T40**

**Gen. 1 & 2 6T70**

**6L45/50/80/90**

\*One valve body SKU services all '99-later 45/545RFE & 65/66/68RFE transmissions.

**Ask your distributor TODAY for a Sonnax remanufactured valve body.**

See all 140+ units available for domestic and import transmissions at [www.sonnax.com](http://www.sonnax.com).

# sonnax®

Visit [www.sonnax.com](http://www.sonnax.com) for details. • 800-843-2600 • 802-463-9722



A Marmon/Berkshire Hathaway Company