

Oversized 1-2 Accumulator Valve

84754-57K

Valve




Tool Kit

F-84754-TL57

- Reamer
- Guide Pin
- Reamer Jig



NOTE: Sonnax "F-Tool" kits designed to service a specific bore require the VB-FIX, a self-aligning valve body reaming fixture. More information and instructions are available at www.sonnax.com.

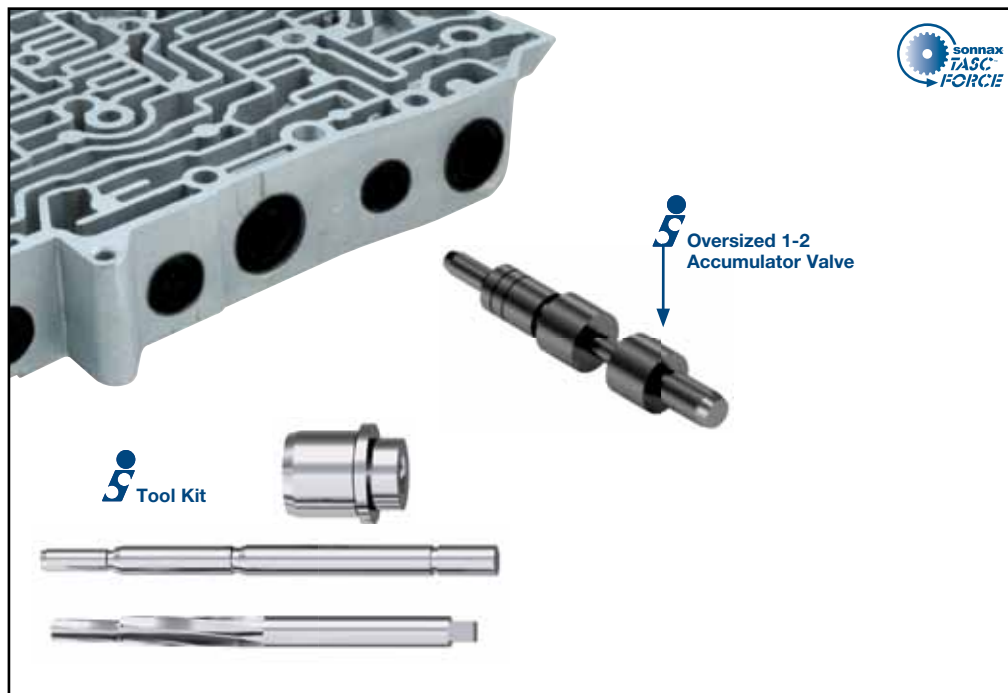

1. Disassembly

- Remove OEM retainer, plug, valve and spring.
- Discard OEM valve.
- Please keep OEM plug, retainer and spring.

2. Bore Preparation

- Clean the bore thoroughly in a solvent tank.
- Generously lubricate the bore and reamer with cutting fluid (i.e. Mobilmet S-122, Lubegard Bio-Tap, Tap Magic™, etc.). For best results, provide a continuous flow of water-soluble cutting fluid (i.e. Mobilmet S-122) during the reaming process.
- The reamers should be turned using a low RPM, high-torque air drill regulated to a maximum of 200 RPM.
- Examine the bore after cleaning for surface finish, debris and burrs. Flashing and burrs on the exit side of land and bores must be carefully removed. A small piece of Scotch-Brite™ material attached to a wire and powered with a drill motor is ideal for the task. Scotch-Brite™ is a very abrasive material and all residual must be cleaned to insure particles do not migrate or remain imbedded into the surface. Post cleaning involves several progressive steps with solvent on a lint-free rag.

CAUTIONS AND SUGGESTIONS:

- Turning the reamer backward will dull it prematurely.
- Pushing on the reamer will result in poor surface finish and inadequate and sporadic material removal.
- Never use a crescent wrench, ratchet or pliers to turn the reamer.
- A dull reamer will cut a smaller hole. Reamers can be sharpened, but should only be done by a professional tool sharpener. Actual life of a Sonnax reamer before sharpening or replacing averages 50-70 bores.


4T65-E

Oversized 1-2
Accumulator Valve

PART NUMBERS 84754-57K, F-84754-TL57

3. Bore Reaming

Use the associated "F-Tool" kit and VB-FIX reaming fixture as illustrated below to ream the bore.

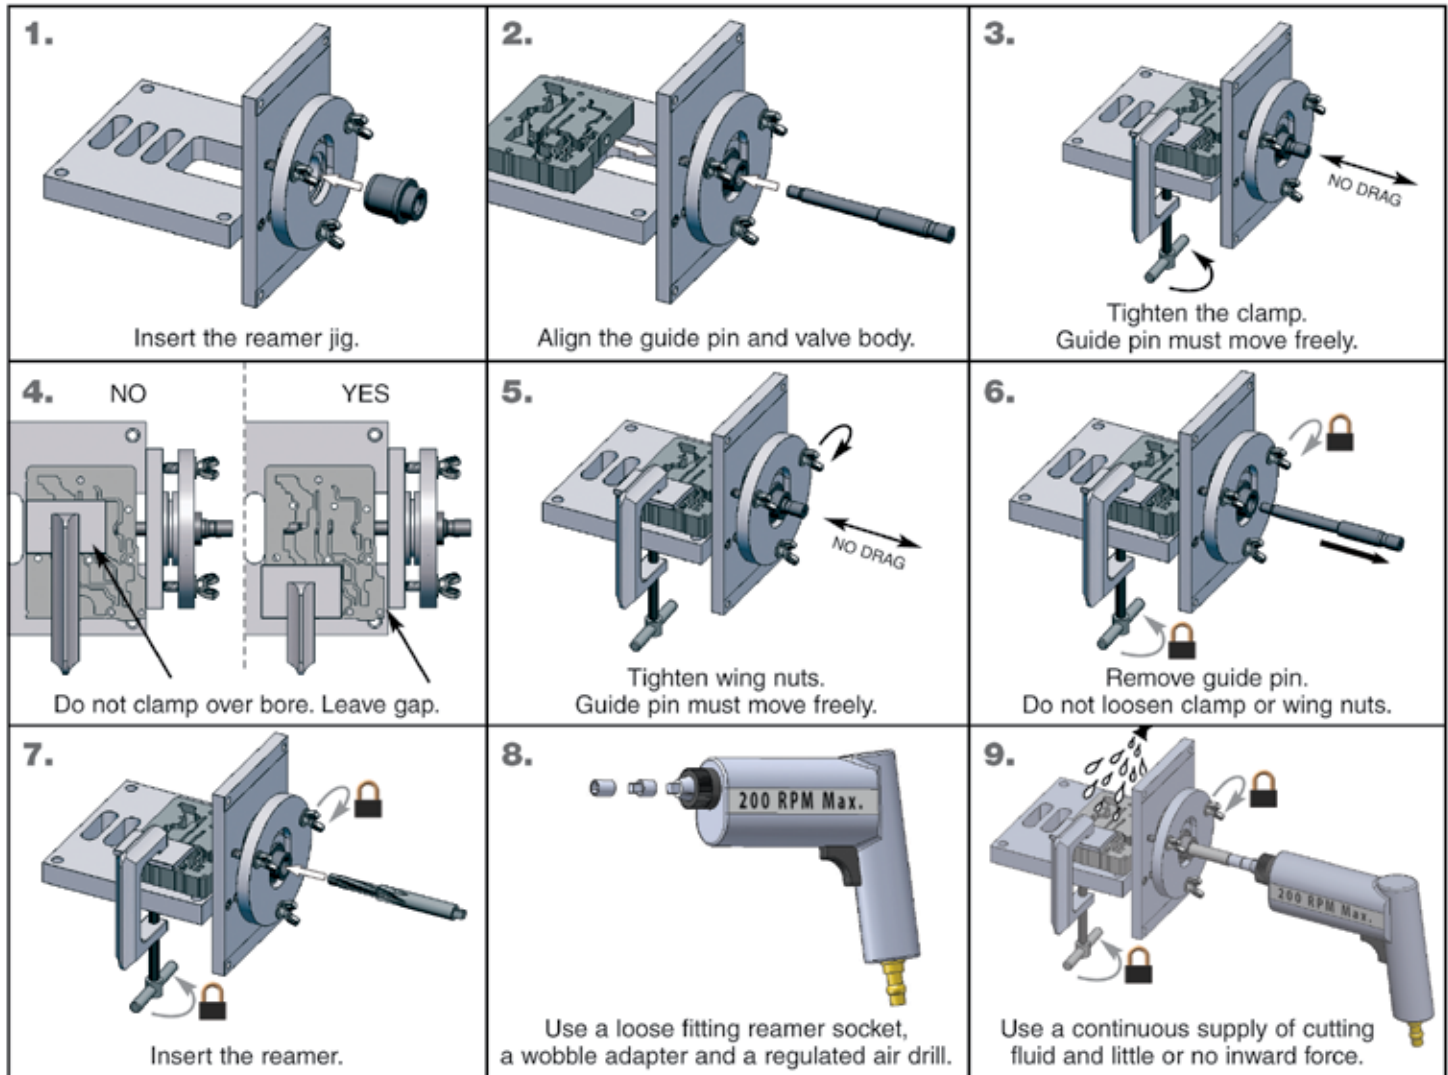

4. Installation & Assembly

- Place OEM spring onto narrow spring stem of oversized valve.
- Install spring and valve into reamed bore, spring end first.
- Install OEM plug into bore and retain with OEM retainer.

5. Final Testing

A vacuum test at torque signal, exhaust or balance ports should hold 18" of vacuum or higher.

